

Removing and installing radiator grille

Overview

1 - Bumper cover


2 - Radiator grille

- Bumper cover removed.

3 - Trim moulding for radiator grille


4 - Carrier for registration plate

- Bumper cover not removed
- To remove, unclip from radiator grille from back.

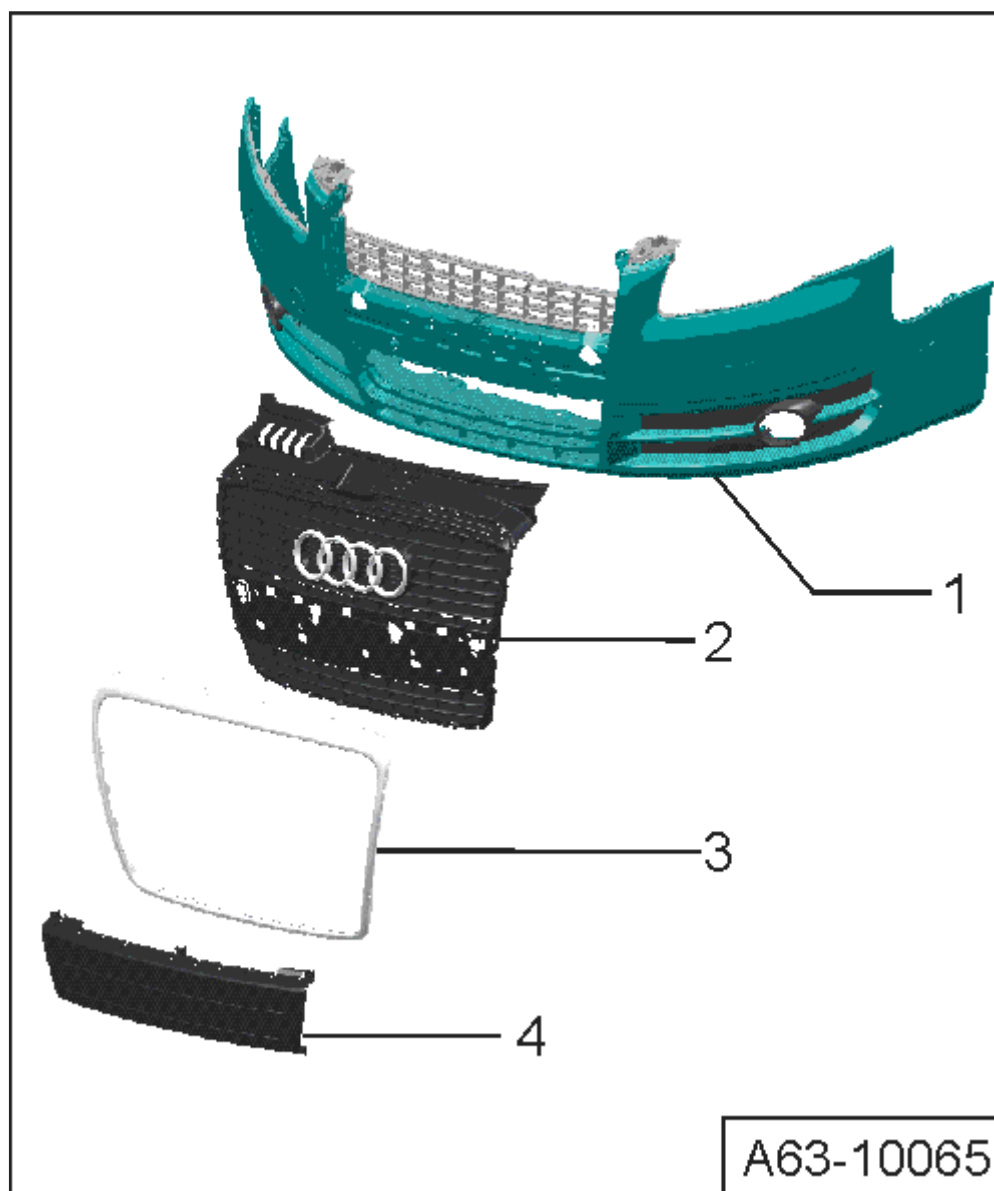


Removing radiator grille

- Bumper cover removed.
- Unscrew bolts all around -arrows- and detach radiator grille from bumper cover.
- Tighten bolts to 1.5 Nm when installing.

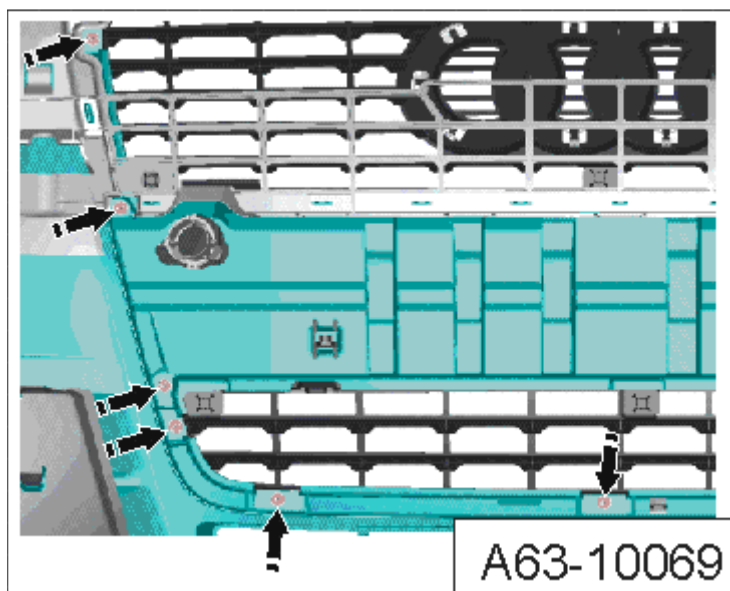


Removing trim for fog light

- Loosen retainers -arrows- and detach trim towards inside.

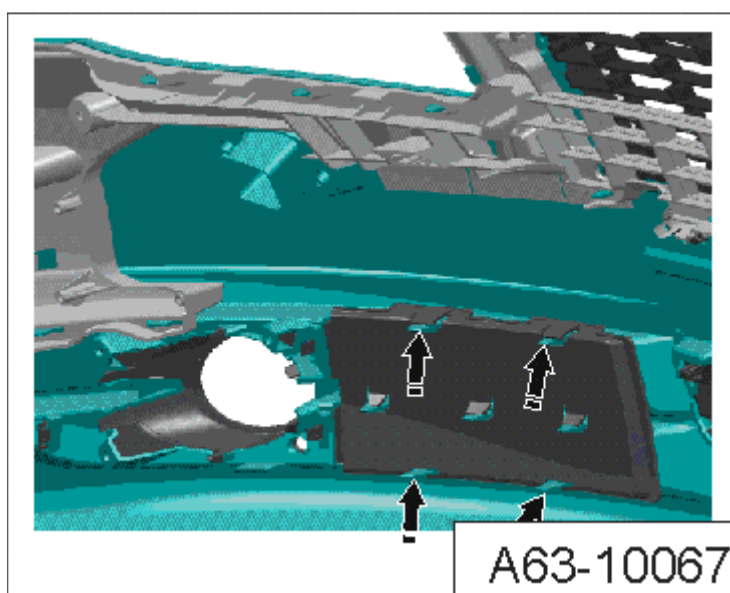

Fog light removed.

- Loosen retainers -arrows- and detach trim towards outside.

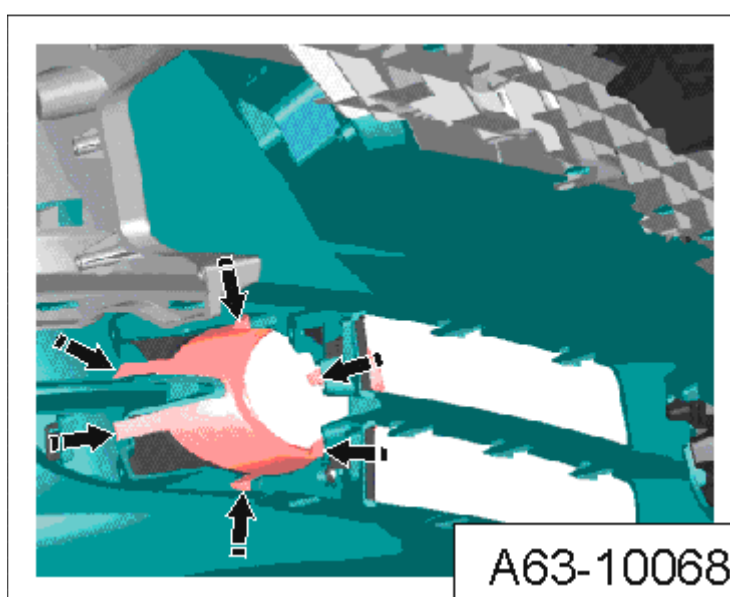

The covers consist of two parts.

Loosen retainers -arrows- and detach cover towards outside.

