


## Removing and installing bumper cover


### Special tools and workshop equipment required

- ♦ Hose clamps up to Ø 25 mm -3094-

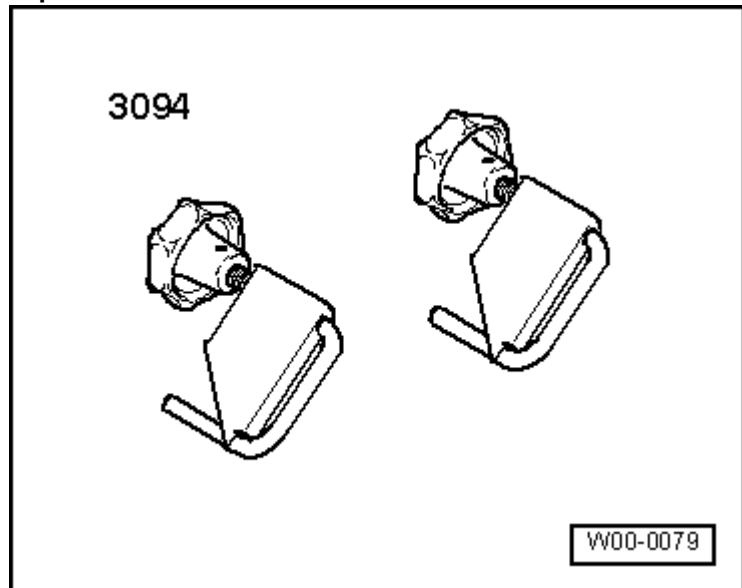


### Removing


- Remove bolts -arrows-.
- Detach fastening strip -1-.
- Unbolt both front wheels.

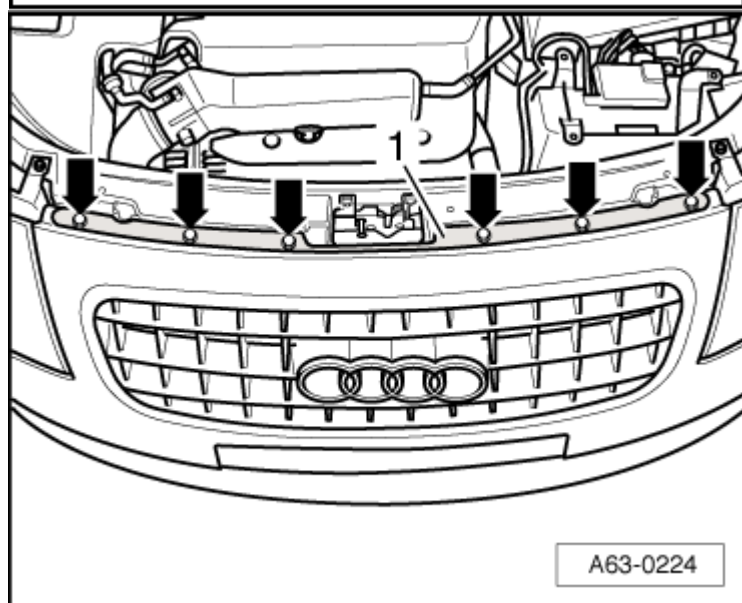


- Remove bolts -arrows-.
- Remove wheel spoiler -1-.
- Release quick release fasteners -2- and -3-.
- Fold back front part of wheel housing liner.

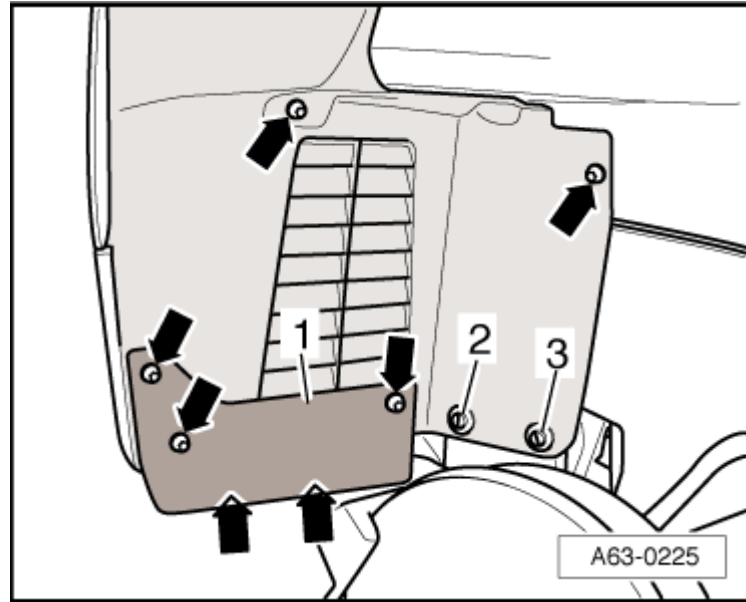

- Use hose clamp -3094- to clamp off washer hose coming from washer fluid reservoir.
- Detach washer water hose at connection piece by pressing release button.
- Unscrew bolt -1- and nuts -2- and -3-.

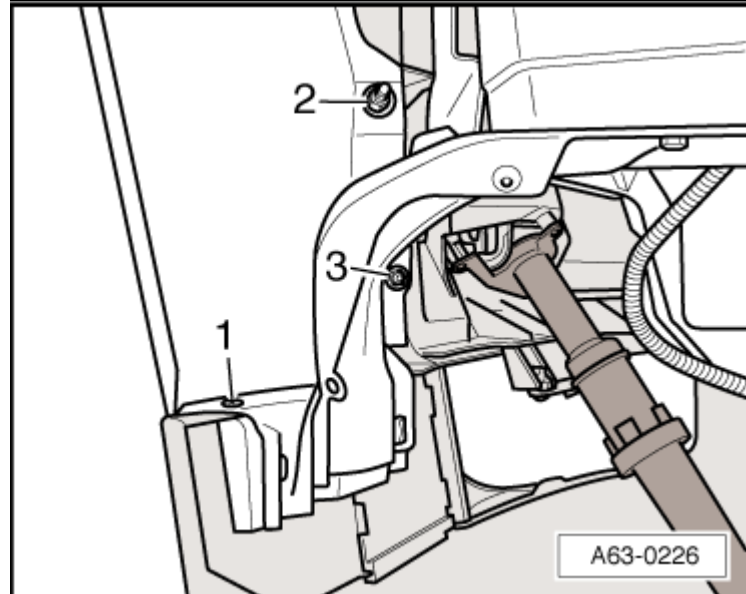


- Release retainers using screwdriver - arrow-, then remove air intake grille -1- (left and right).
- Detach air intake grille towards front.

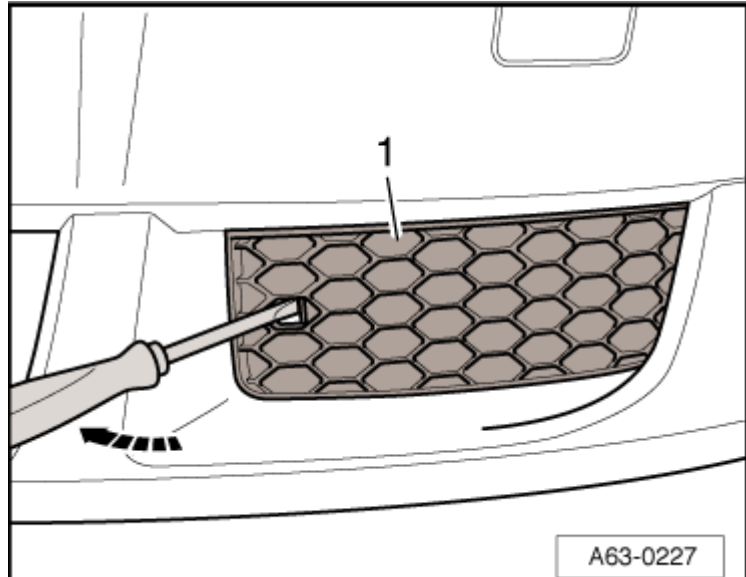

Vehicles with 6-cyl. engine or S-line package:

- Unscrew bolt -2-.
- Detach cover (right-side) -1- from air cowl.

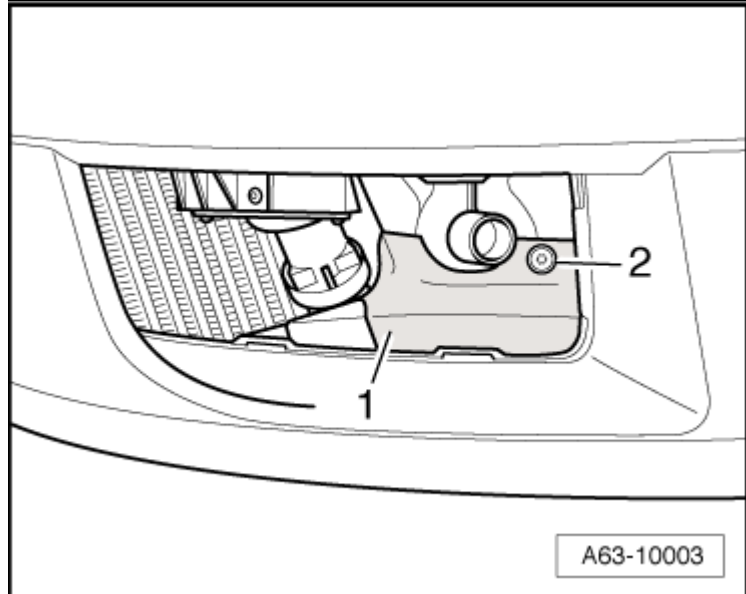

- Unscrew bolts -2- and -3-.
- Detach cover (left-side) -1- from air cowl.

All models:

- Detach side sections of bumper at guide.
- Detach bumper cover.



Note


A second mechanic is required to detach the bumper cover.

Installing


Installation is carried out in reverse order; note the following:

- Before installing bumper -4- check that clips -2- are inserted in wing panel -3-.
- Tighten nuts -1-.

Tightening torques

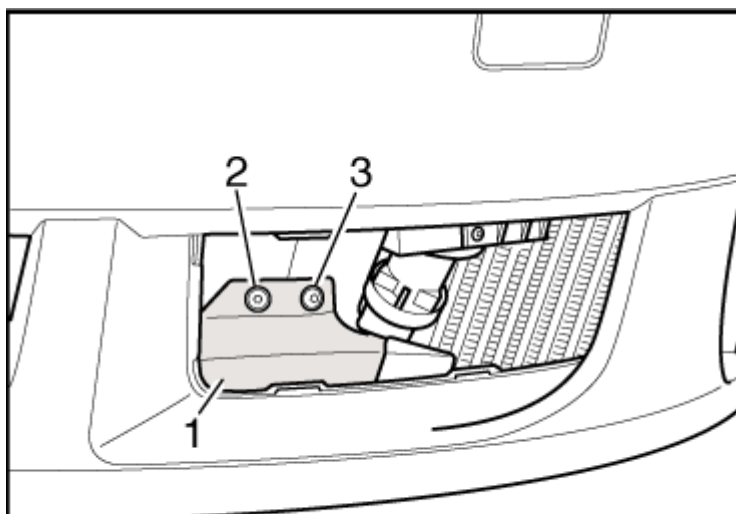

A63-10004

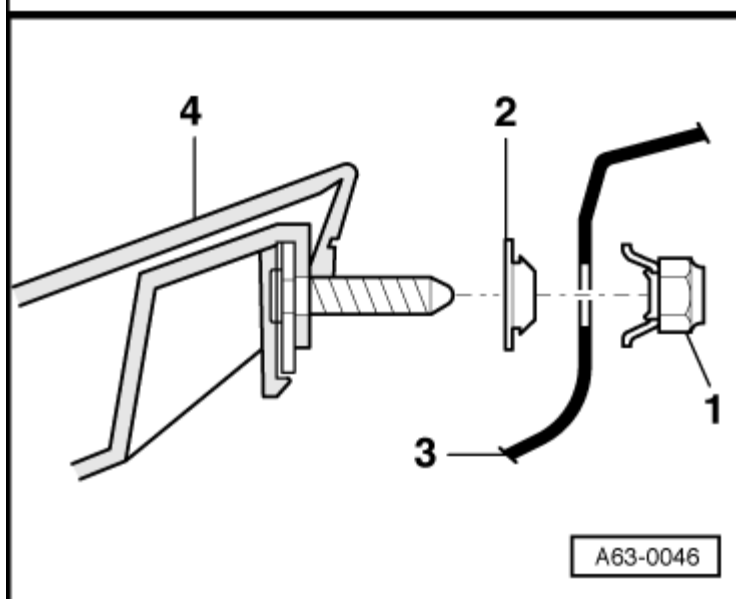

A63-0046

Component	Nm
Bumper to wing panel	6
Cover to air cowl	1.5
Fastening strip to lock carrier	6.5