

Servicing KE III Jetronic injection system

Exploded view of fitting locations

1. Connector

- ☐ For FEI control unit
- ☐ Wait 30 seconds after switching off ignition before unplugging or attaching connector

2. FEI control unit - J154


- ☐ In front passenger's footwell beneath support bracket
- ☐ Removing and installing=>Page [28-22](#)

3. Elevation sender - F96

- ☐ Fitting location: A-pillar in front passenger's footwell behind trim

4. Connector

- ☐ For KE III Jetronic control unit
- ☐ Wait 30 seconds after switching off ignition before unplugging or attaching connector

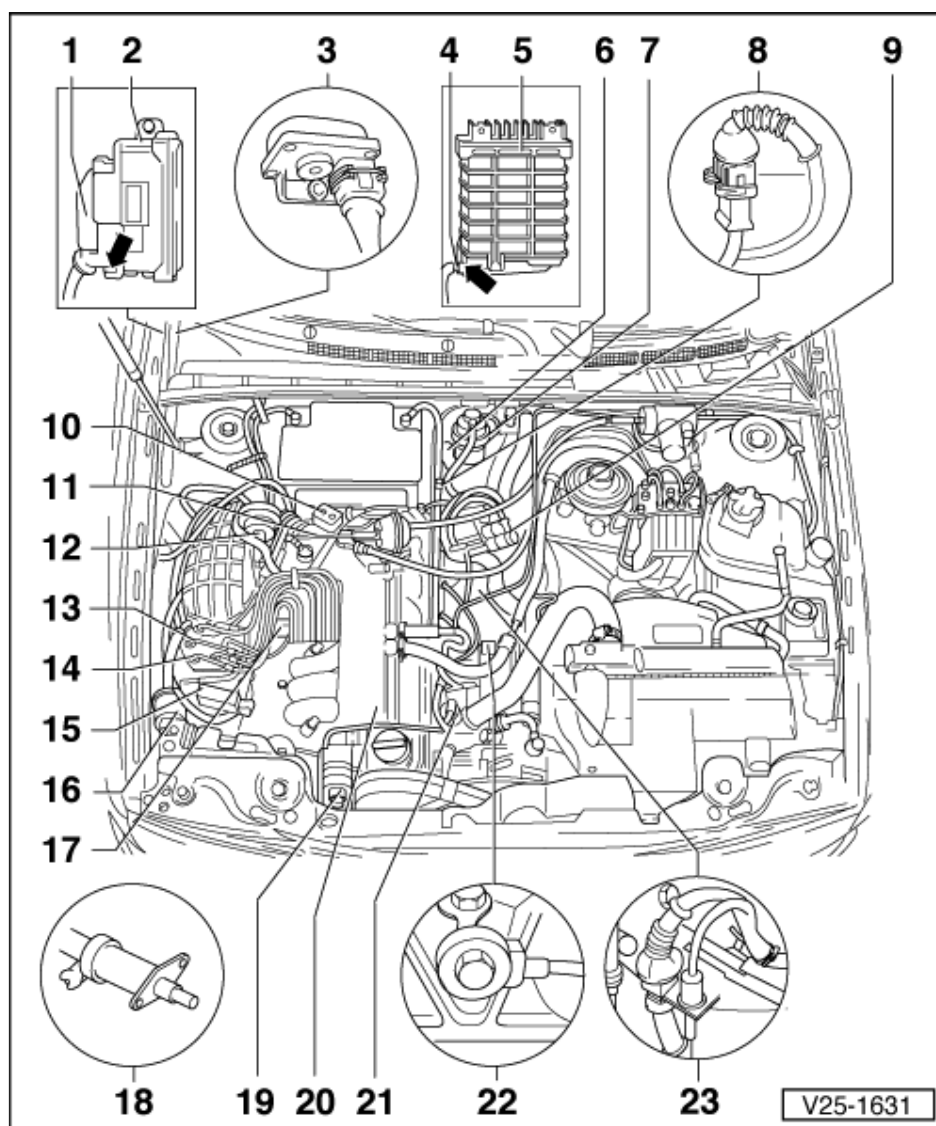

5. KE III Jetronic control unit -J21

- ☐ Between bulkhead and air duct in passenger's footwell
- ☐ Removing and installing=>Page [25-19](#)

6. Output stage for ignition transformer


- ☐ Checking => Page [28-13](#)
- ☐ Cannot be replaced separately

7. Ignition transformer - N152

- ☐ Checking => Page [28-11](#)


8. Connector

- ☐ For knock sensor 1 -G61
- 9. Ignition distributor - O**
- ☐ With Hall sender -G40
- 10. Full throttle switch - F81**
- 11. Idling switch -F60**

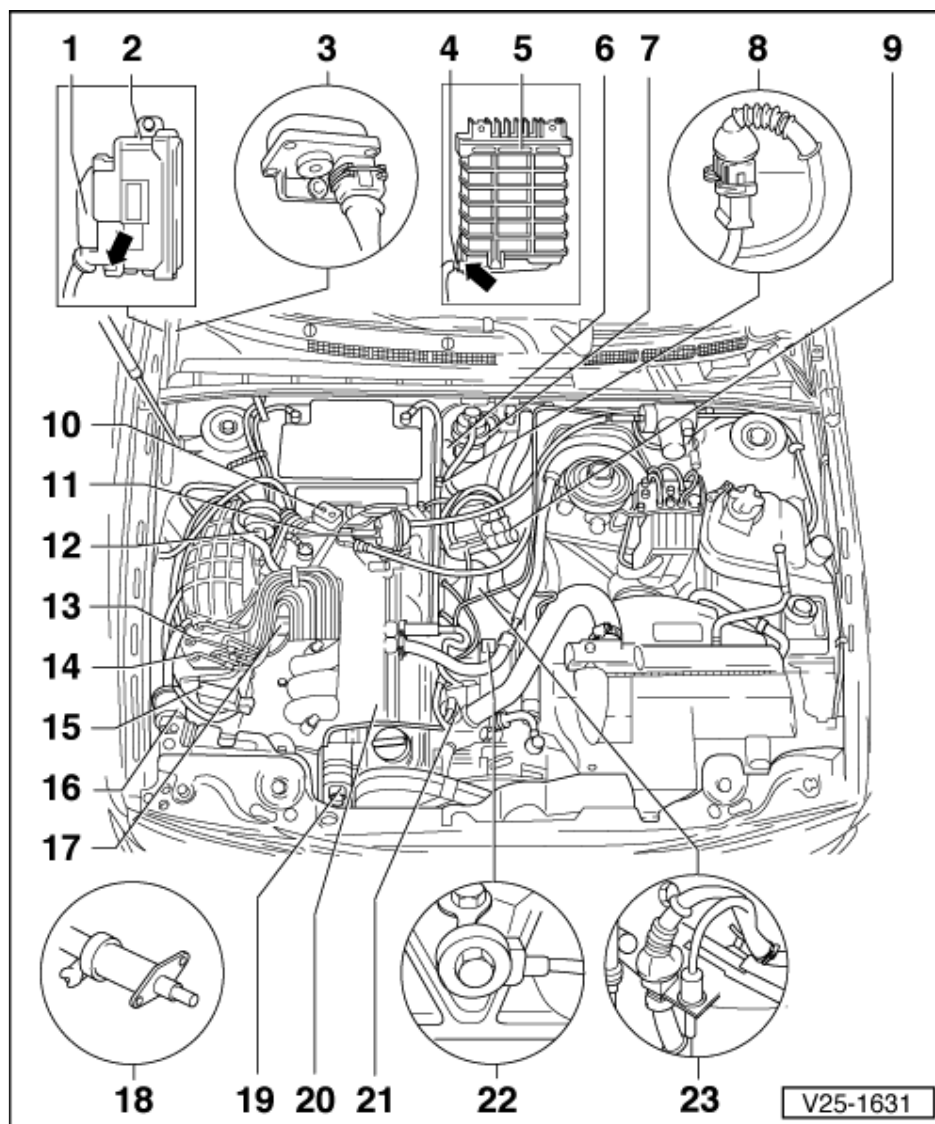

- 12. Activated charcoal filter solenoid valve -N80**
 - ☐ Checking => Page [01-23](#)
- 13. Fuel distributor**
- 14. Air-flow meter potentiometer -G19**
 - ☐ Checking =>Page [25-71](#)
 - ☐ Cannot be replaced separately
- 15. Pressure regulator - N73**
- 16. Fuel pressure regulator**
- 17. CO measurement pipe**
 - ☐ With cap
- 18. Cold start valve - N17**
 - ☐ Checking => Page [25-34](#)
 - ☐ Bolt (10 Nm) to intake manifold
 - ☐ Bolt on (15

Nm) fuel pipe

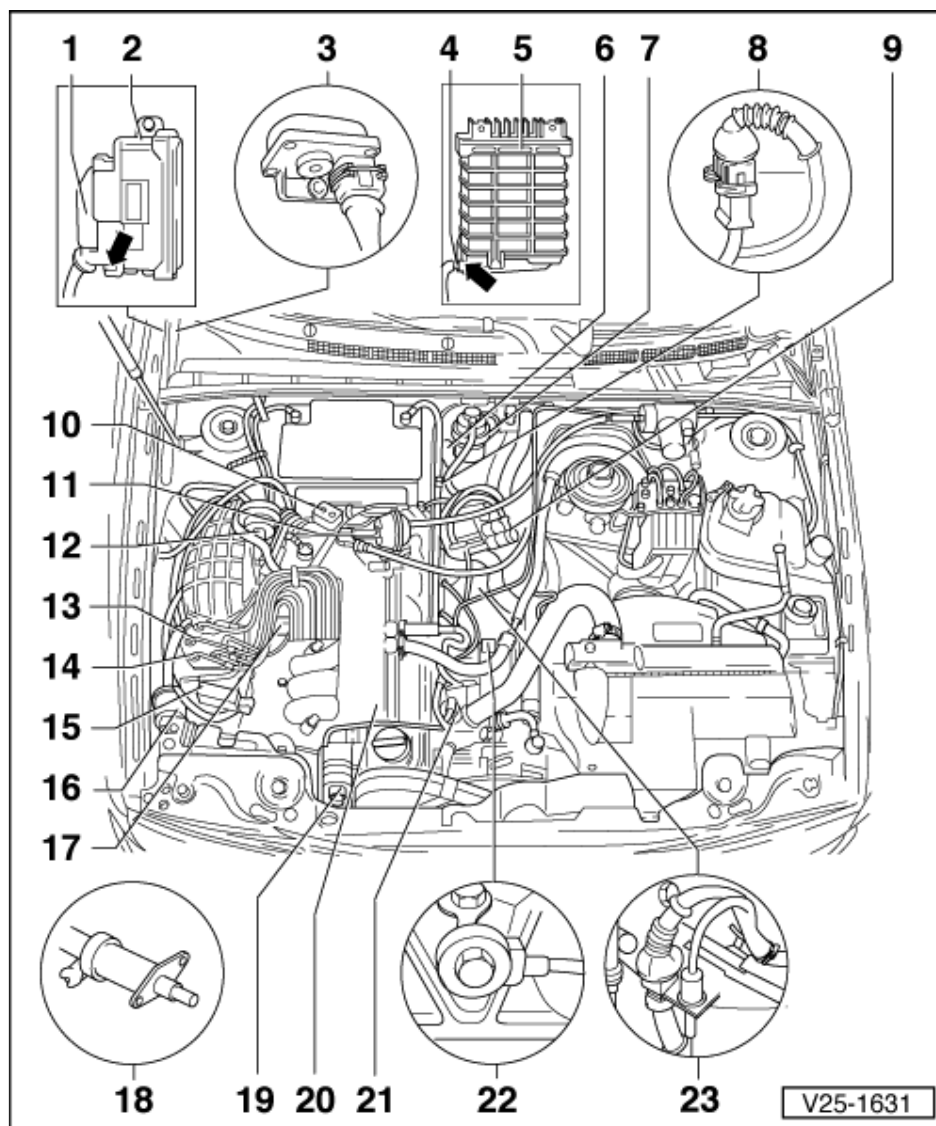

19. Idling-speed stabilisation valve - N71

- ☐ Checking =>
Page [25-41](#)

20. Intake manifold

21. Coolant temperature sender -G62

- ☐ Resistance values =>
Page [28-18](#)

22. Knock sensor 1 - G61

23. Connectors

- ☐ a - 2-pin, for Lambda probe heater -Z19
- ☐ b - 1-pin, for signal of Lambda probe -G39

