
Model year 1997

Fuse box

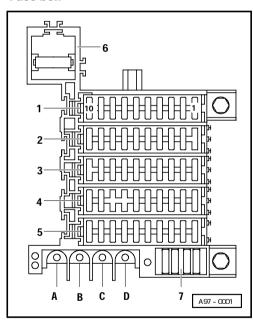


Fuse colours:

30 A - green 25 A - white 20 A - yellow 15 A - blue 10 A - red 5 A - beige


1-Fuse carrier 1 (ST1), black 2-Fuse carrier 1 (ST2), red 3-Fuse carrier 1 (ST3), yellow 4-Fuse carrier 1 (ST4), blue 5-Fuse carrier 1 (ST5), brown 6-Radiator fan fuse (S42) 7-Spare fuses A, B, C, D - Screwed junctions

Relay and fuse carrier, luggage compartment, right

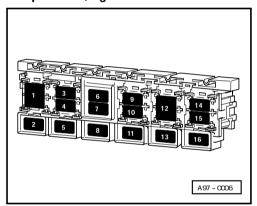

Position of relays:

- -Terminal 30 junction box
- 7 -Radio fuse (\$92)

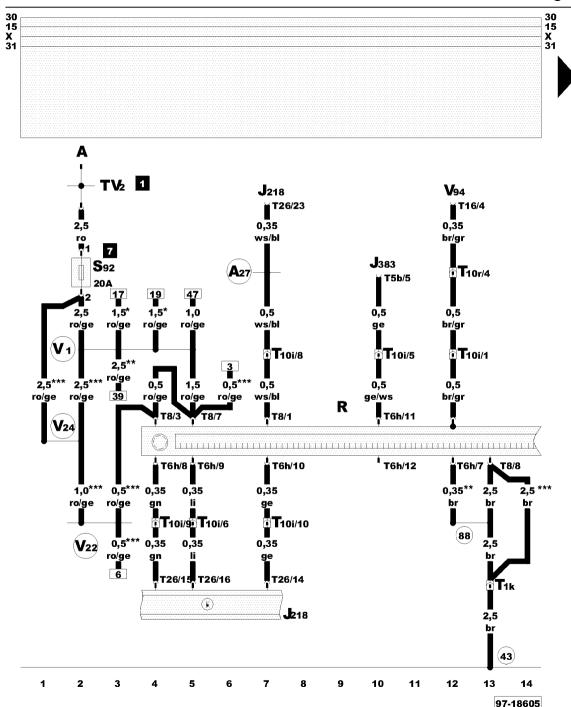

A - Battery

J218 - Combi-processor in dash panel insert

J383 - Audio steering wheel printed circuit board

- Radio

S92 - Radio fuse

T1k - Single connector, brown, in centre console

T5b - 5-pin connector, black, behind steering column switch trim

T6h - 6-pin, connector, green, radio connector I-2

8-pin connector, black, radio connector III

T10i - 10-pin connector, yellow, in centre console

T10r - 10-pin pin connector, dark brown, connector point, wheelhouse, right

T16 - 16-pin connector, connector plug C at V94

26 - 26-pin connector, red, on dash panel insert

TV2 - Terminal 30 junction box

V94 - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system

(43) - Earth point, lower part of right A-pillar

- Earth connection, in radio wiring harness

7) - Connection (speed signal), in dash panel wiring hamess

 Positive (+) connection (30), in rear loudspeaker wiring harness

- Positive (+) connection (30a), in navigation wiring harness

Positive (+) connection (30a), in loudspeaker wiring hamess

* - Radio gamma, delta sound system

* - Radio-Bose-sound system

ws = white


sw = black

br = brown qn = green

ge = yellow

ro = red

bl = blue gr = grey li = purple - Only models with navigation system

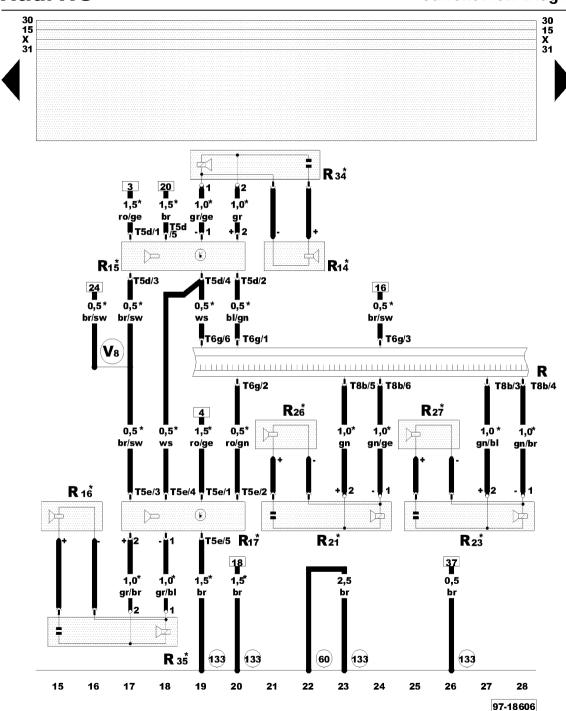

R - Radio

(V8)

R14 - Treble loudspeaker, rear left

R15 - Bass loudspeaker, rear left

R16 - Treble loudspeaker, rear right

R17 - Bass loudspeaker, rear right

R21 - Bass loudspeaker, front left

R23 - Bass loudspeaker, front right

R26 - Middle-high tone loudspeaker, front left

R27 - Middle-high tone loudspeaker, front right

R 34 - Middle-treble tone loudspeaker, rear left

R35 - Middle-treble tone loudspeaker, rear right

T5d - 5-pin connector, on loudspeaker rear left, under rear shelf

T5e - 5-pin connector, on loudspeaker rear right, under rear shelf

T6g - 6-pin connector, yellow, radio connector I-1

T8b - 8-pin connector, brown, radio connector II

60 - Earth point, near right tail light

(133) - Earth connection, in loudspeaker wiring harness

- Connection (negative, loudspeaker) in loudspeaker wiring hamess

* - Radio gamma, delta sound system


ws = white sw = black ro = red br = brown

gn = green

bl = blue gr = grey

li = purple

ge = yellow

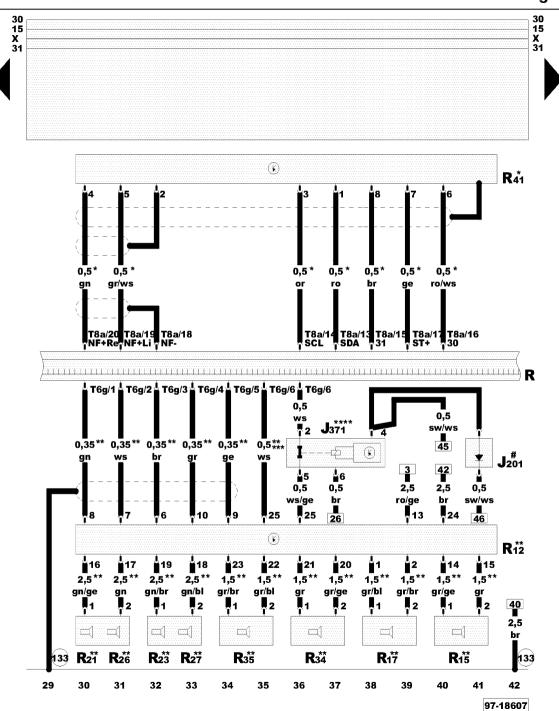

J201 - Protective diode

J371 - Telephone isolation relay, near frequency divider in rear left luggage compartment

R - Radio

R12 - Amplifier

15 - Bass loudspeaker, rear left

R17 - Bass loudspeaker, rear right

R21 - Bass loudspeaker, front left

R23 - Bass loudspeaker, front right

R 26 - Middle-high tone loudspeaker, front left

R27 - Middle-high tone loudspeaker, front right

R34 - Middle-treble tone loudspeaker, rear left

35 - Middle-treble tone loudspeaker, rear right

R41 - CD changer

T6g - 6-pin connector, yellow, radio connector I-1

T8a - 8-pin connector, blue, radio connector I-3

133 - Earth connection, in loudspeaker wiring harness

- Only models with CD changer

- Radio-Bose-sound system

** - Models without telephone

**** - Models with telephone

- Models with navigation system

ws = white

sw = black

br = brown qn = green


= blue


li = purple

ge = yellow

gr = grey

ro = red

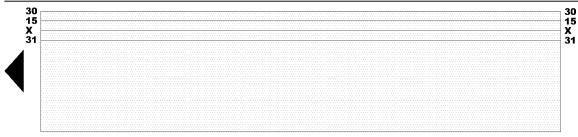

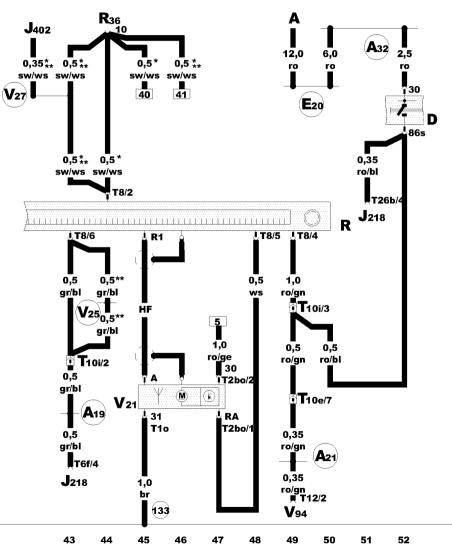

A - Battery

D - Ignition/starter switch

J218 - Combi-processor in dash panel insert

J402 - Operating electronics control unit, navigation

R - Radio

R36 - Telephone transmitter and receiver unit

T1o - Single connector, on aerial motor

T2bo - 2-pin connector, on aerial motor

T6f - 6-pin connector, black, on dash panel insert

8 - 8-pin connector, black, radio connector III

T10e - 10-pin connector, green, connector point,

wheelhouse, right

T10i - 10-pin connector, yellow, in centre console

T12 - 12-pin connector, connector plug A at V94

T26b - 26-pin connector, yellow, on dash panel insert

V21 - Aerial motor

 V94 - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system

133) - Earth connection, in loudspeaker wiring

19) - Connection (58d), in dash panel wiring harness

A 21) - Connection (86s), in dash panel wiring harness

A 32) - Positive (+) connection (30), in dash panel wiring hamess

20) - Positive (+) connection (30), in Motronic wiring harness

(25) - Connection (58), in navigation wiring hamess

) - Connection (mute circuit), in navigation wiring harness

* - Models with telephone

- Only models with navigation system

97-18608

ws = white

sw = black

br = brown

= blue

ge = yellow

gr = grey li = purple

= green

ro = red