



Removing and installing rear light and bulb carrier (Avant)

Removing

- Switch off ignition and take out ignition key.
- Turn light switch to position "0".
- Remove plug -arrow- from luggage compartment lining.

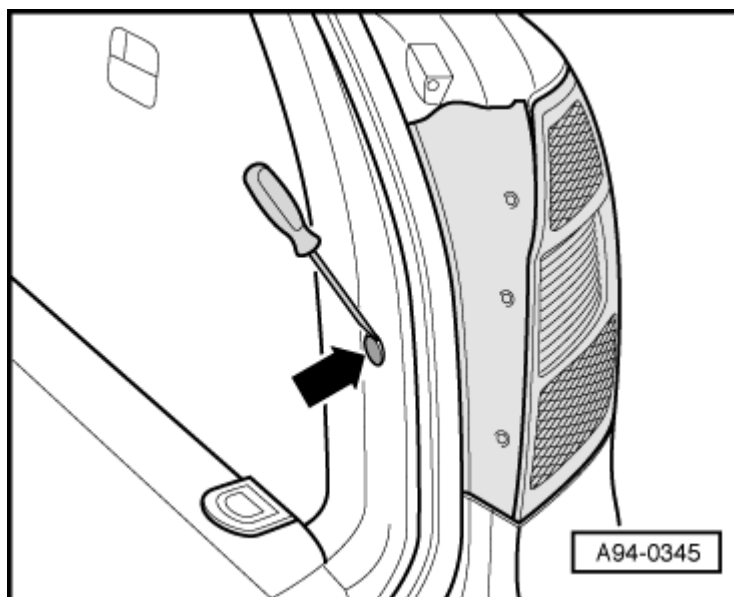

- Remove bolt -1-.
- Swivel rear light outwards, and at the same time disengage retaining pins from body.
- Unplug electrical connector at bulb carrier.

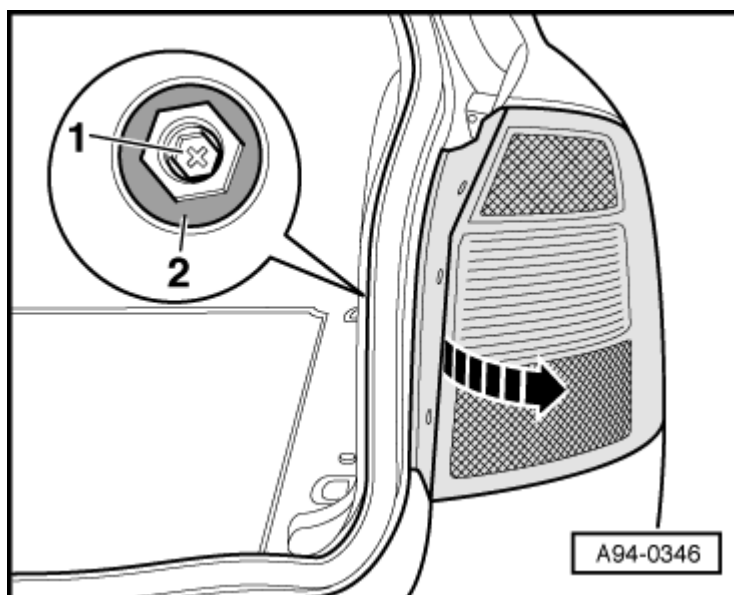

- Press apart retaining clips -arrows- and take bulb carrier out of rear light.
- Turn bulbs to remove them from their holders.

Installing


Installation is carried out in the reverse order; note the following:



Note

Ensure that seal between body and rear light housing seals completely.

- Fit rear light in position on body and press retaining pins into holes.

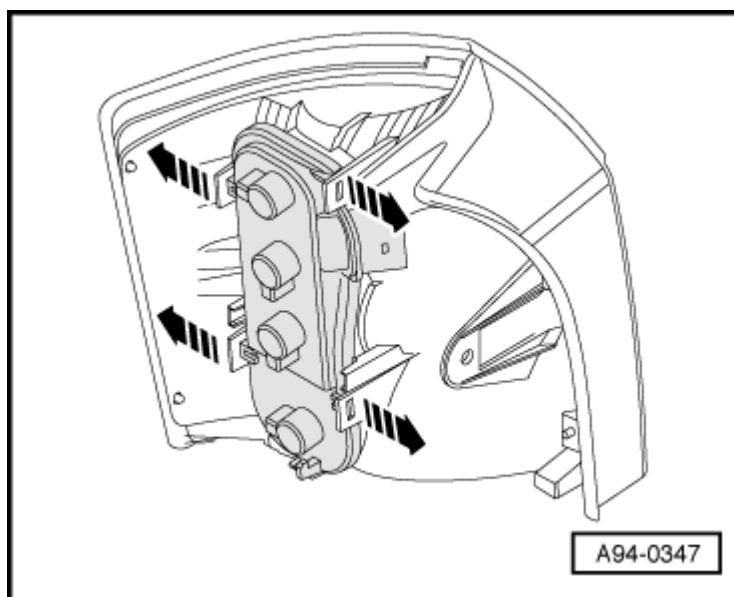


– Tighten bolt -1-.

Note

After unfastening nut -2-, rear light can be aligned with body contours (uniform gap widths).

Tightening torques

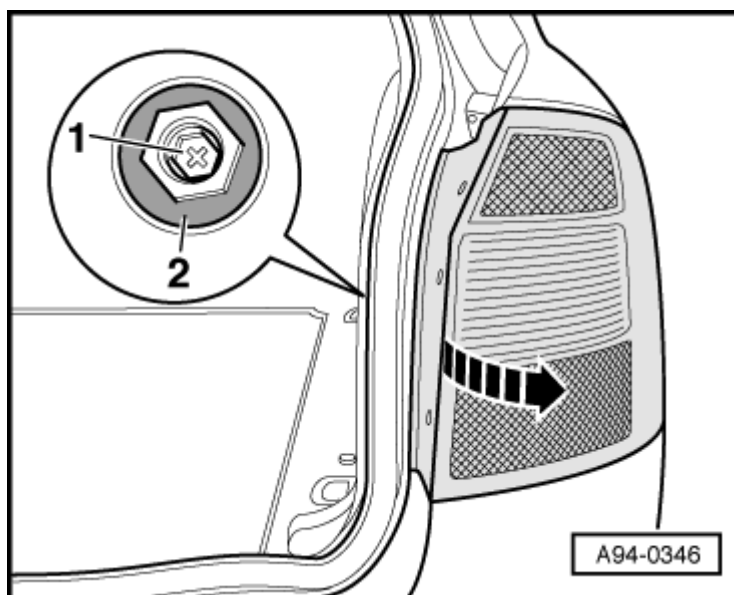

Component	Nm
Nut for rear light to body	12
Rear light to body	6