


Removing and installing A-pillar trim (top)

Special tools and workshop equipment required

- ⌘ Torque wrench -V.A.G 1410-

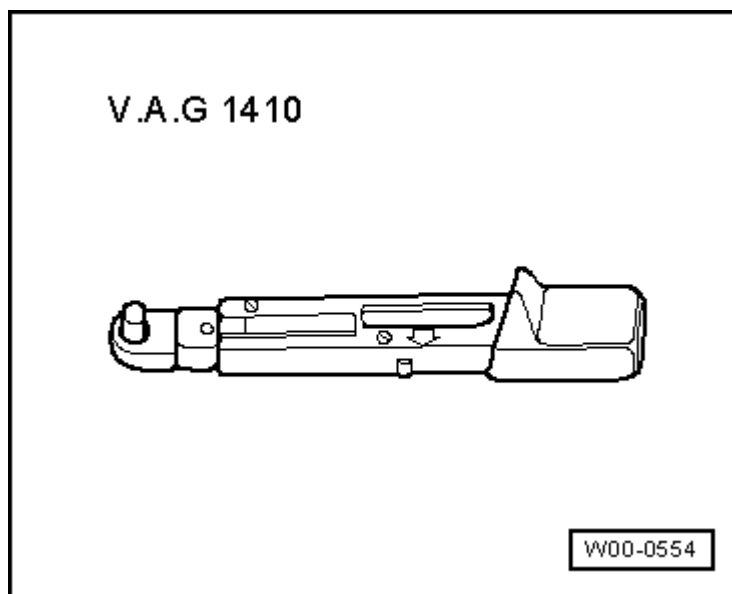


WARNING

Observe safety precautions for working on airbags → **Chapter** and curtain airbags → **Chapter**.

1 - A-pillar trim (top)

- ⌘ Removing:
- ☐ Remove sun visor → **Chapter**.
- ☐ Fold down roof grab handle -5-.
- ☐ Fold down flap over bolts at roof grab handle -4-.
- ☐ Remove bolts -2-.
- ☐ Unclip airbag label -9- at rear (at B-pillar) and pull off.
- ☐ Remove bolt from airbag label.
- ☐ Pull out A-pillar trim (top) -1- beneath B-pillar trim (top) and unfasten the

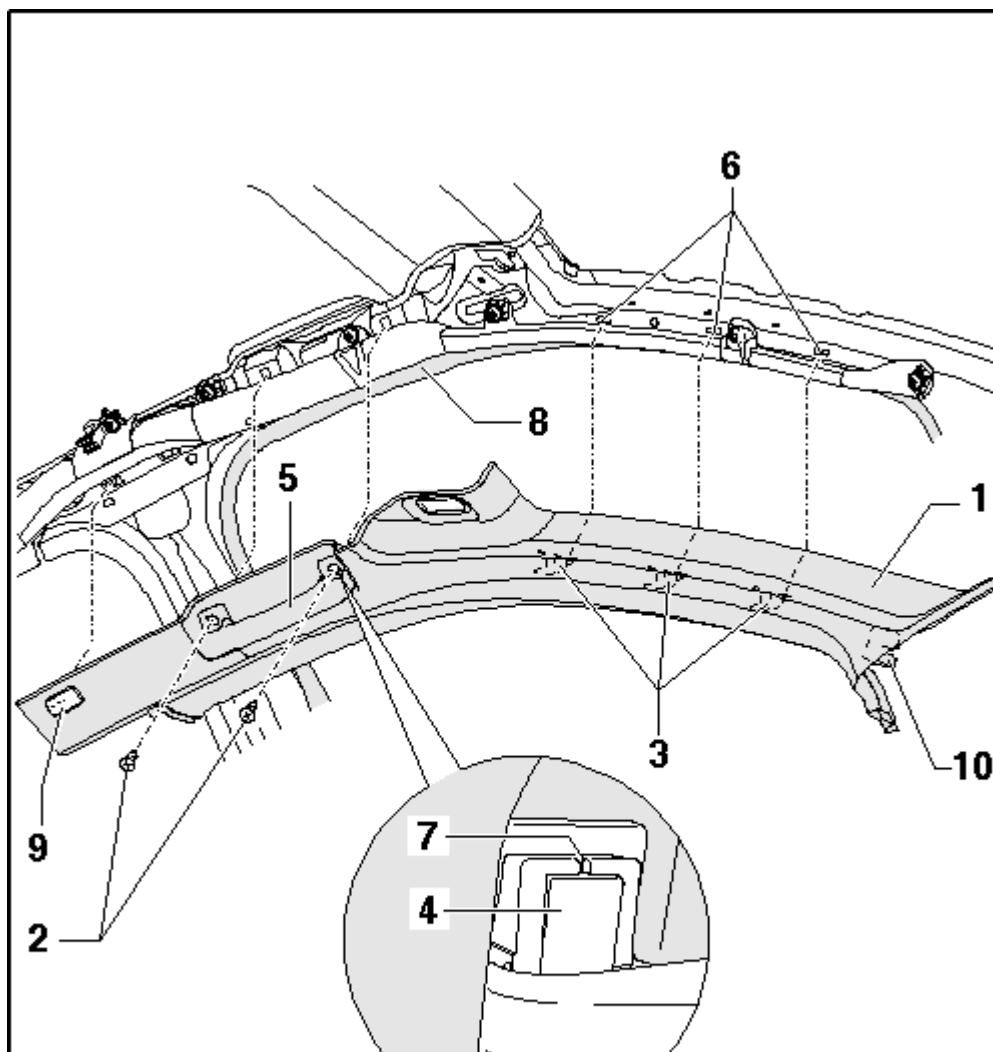

three clips -
3-.

- ☐ Pull out A-pillar trim (top) -1- towards rear.

t Installing:



Caution

Always keep to installation sequence for A-pillar trim.

- ☐ Guide in A-pillar trim (top) -1- at front between rubber door seal and side panel.
- ☐ Guide trim retainer -10- into corresponding clip.
- ☐ Secure A-pillar trim (top) -1- with the three clips -3-.
- ☐ Slide trim beneath B-pillar trim (top).
- ☐ Make sure clip and metal hook of curtain airbag adapter are firmly engaged.



Caution

Make sure trim is properly secured.

2 - Bolts (2x)

- q Tightening torque: 4 Nm
- q Self-locking
- q Always renew after removing
- q Always clean threaded holes for bolts (using a tap for example)

3 - Clips (3x)

4 - Flap for roof grab handle

5 - Roof grab handle

6 - Retainers

7 - Groove

8 - Seal

- q Make sure seal is properly positioned after fitting trim.

9 - Airbag label

10 - Retainer