
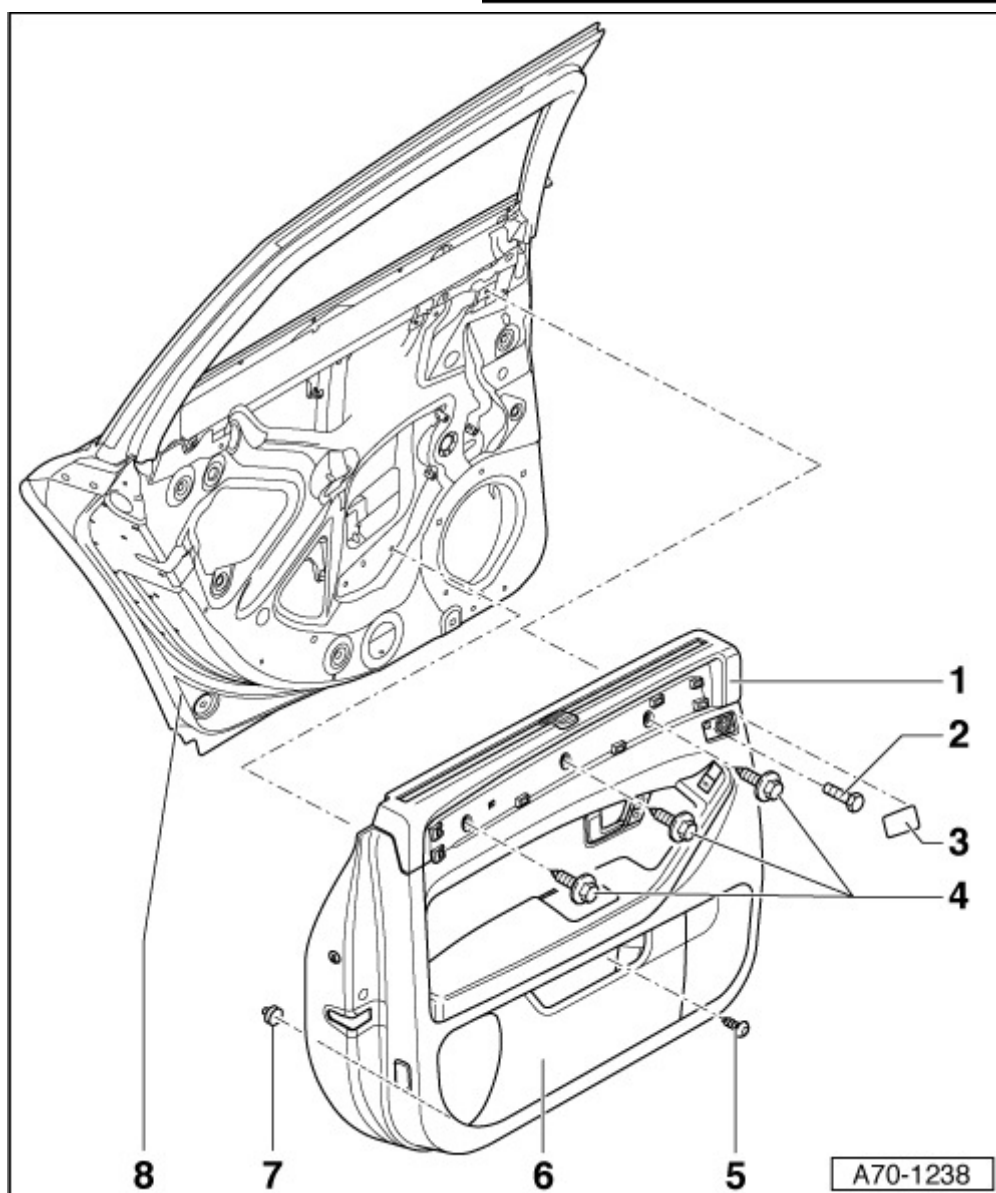


Removing and installing rear door trim

Special tools and workshop equipment required

t Torque wrench -V.A.G 1410-

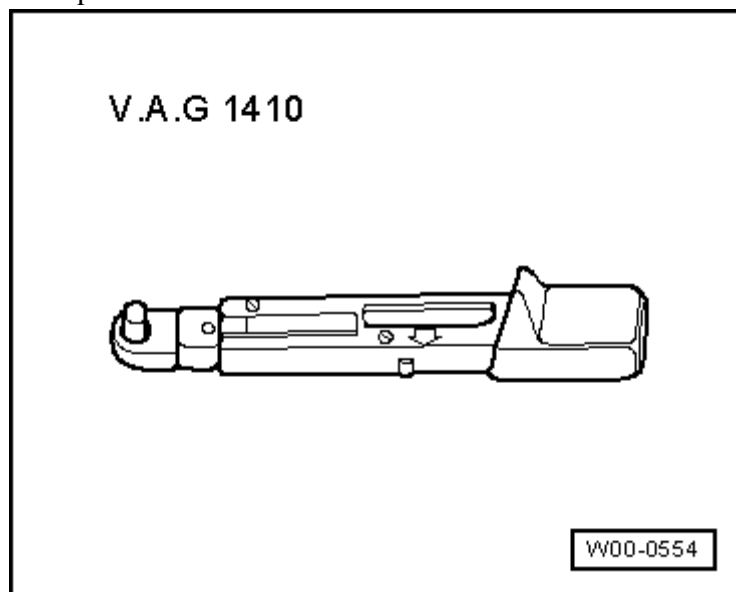

1 - Door trim

t Removing

- Use a screwdriver to prise out the treble loudspeaker trim -3-.
- Unscrew the bolt -2-.
- Unscrew the bolt -5-.

Do not open the hinged pocket -6-.

- Sun blind fitted: Remove the trim panel [→ Chapter](#).
- Unscrew the bolts -4-.
- Starting at the bottom, unfasten the door trim -1- at the clips -7- (8x).
- Disengage the Bowden cable for the interior door handle [→ Fig.](#)
- Unplug the connector at the window regulator control unit [→ Fig.](#)
- Unplug the connector at the bass loudspeaker [→ Fig.](#)

t Installing

- Make sure all the clips -7- are in position on the back of the door trim. Replace damaged clips [→ Fig.](#)
- Install the door trim -1- in the reverse order of removal.

2 - Bolt

q Vehicles with long wheelbase are fitted with a nut.

q Tightening torque 3 Nm.

3 - Treble loudspeaker trim

4 - Bolts

q Vehicles with long wheelbase are fitted with 4 bolts.

q Tightening torque 3 Nm.

5 - Bolt

q Vehicles with long wheelbase are fitted with a nut.

q Tightening torque 3 Nm.


6 - Hinged pocket with mount

7 - Clips (8x)

8 - Door shell


Disengaging Bowden cable

- Pull the Bowden cable -2- out of the guide -1-.
- Disengage the hook -3-.

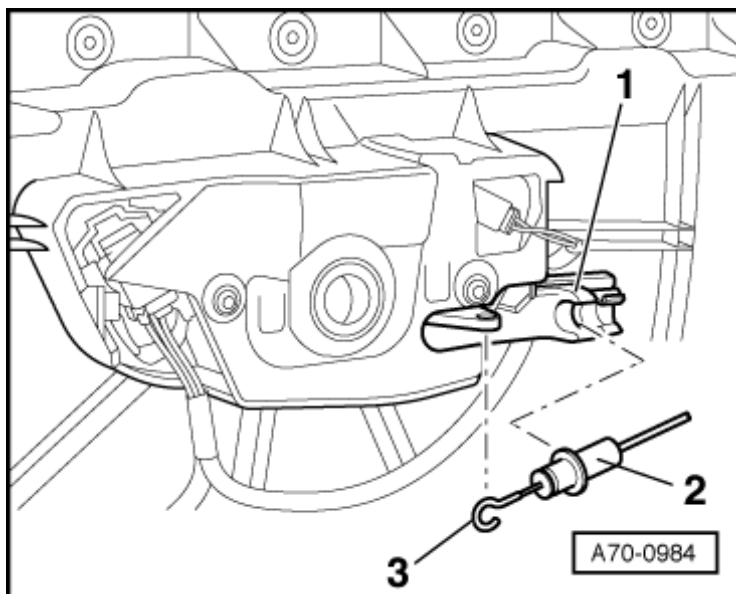


Unplugging connector at window regulator control unit

- Press in the retainer tab on the back of the connector -2- and unplug the connector -2- from the control unit -1-.

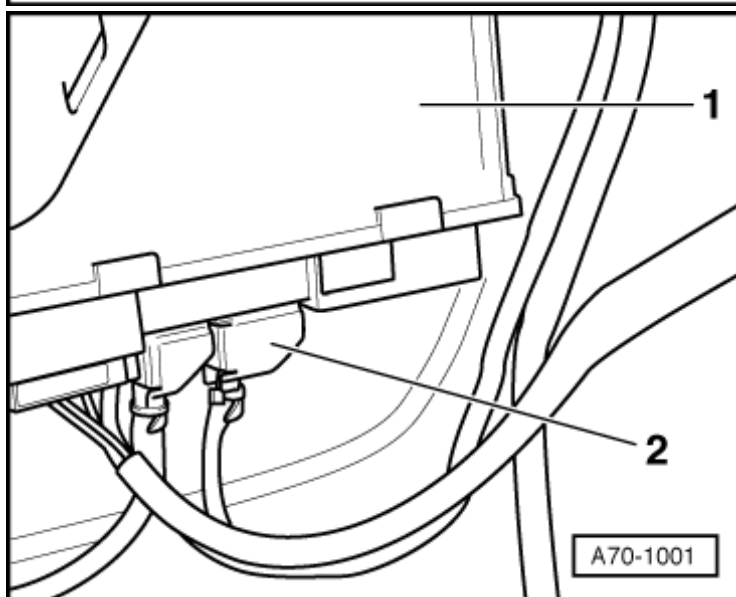

Unplugging connector at bass loudspeaker

- Squeeze the holders -1- (2x) and unplug the connector -2-.

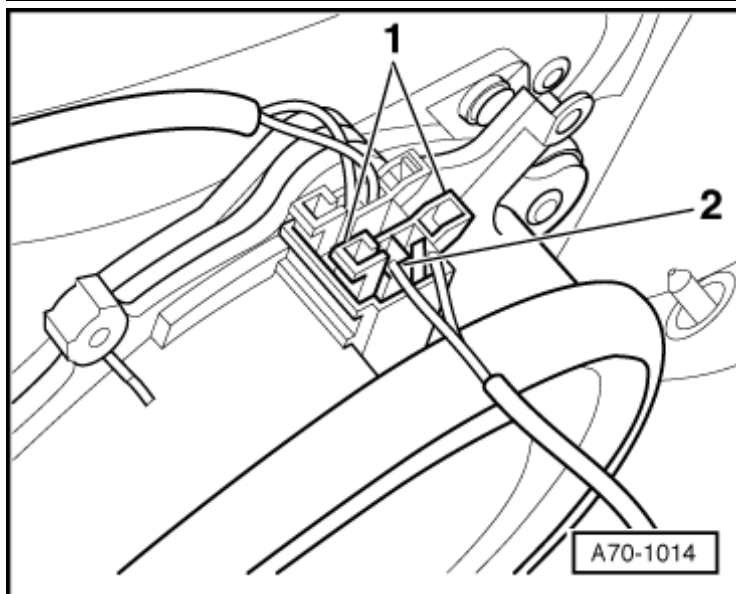

Door trim securing clip

- Press the retainer tab -2- and pull out the clip -1- in arrow direction.

