

Audi A4

Current Flow Diagram

No. 40 / 1

Edition 04.2006

Seat heating, steering wheel heater

from September 2003

Notes:

For information concerning

- ◆ Position of relays and fuses
- ◆ Multi-pin connections
- ◆ Control units and relays
- ◆ Earth connections

→ List of Fitting Locations!

For information concerning



- ◆ Fault Finding Programs

→ guided fault finding

Audi A4

Current Flow Diagram

No. 40 / 2

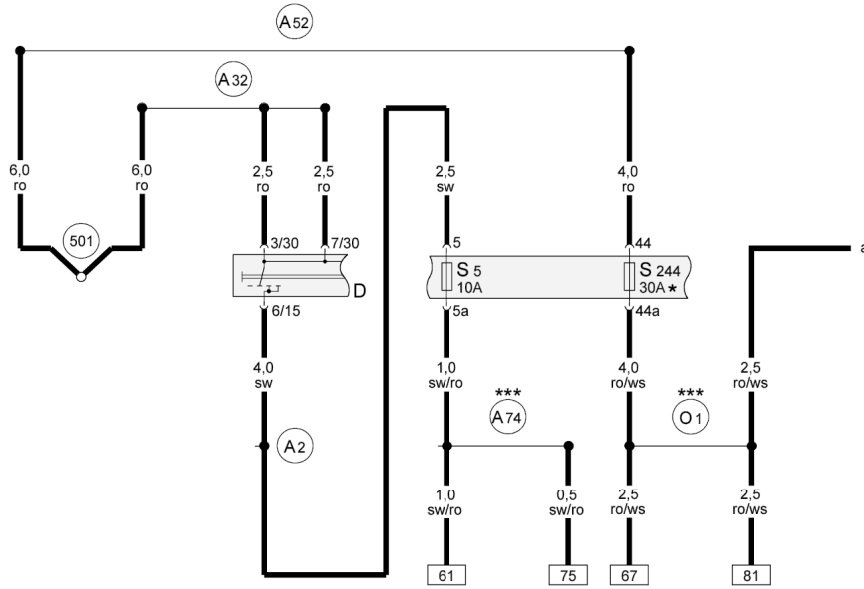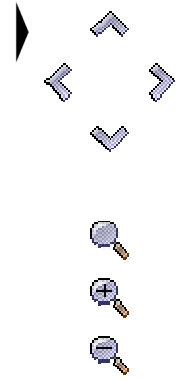

Fuses

- D - Ignition/starter switch
- S5 - Fuses in relay plate fuse holder
- S244 - Fuse in fuse holder
- 501 - Screw connection 2 (30), on relay plate
- A2 - Positive connection (15), in dash panel wiring harness
- A32 - Positive connection (30), in dash panel wiring harness
- A52 - Positive connection 2 (30), in dash panel wiring harness
- A74 - Connection (15a, fuse 5), in dash panel wiring harness
- O1 - Positive connection (30), in seat heating wiring harness
- * - Fuse was increased from 30 A to 35 A, applicable from model year 2006
- *** - for models with heated rear seats only

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


1 2 3 4 5 6 7 8 9 10 11 12 13 14

8E0-040020406


Audi A4

Current Flow Diagram

No. 40 / 3

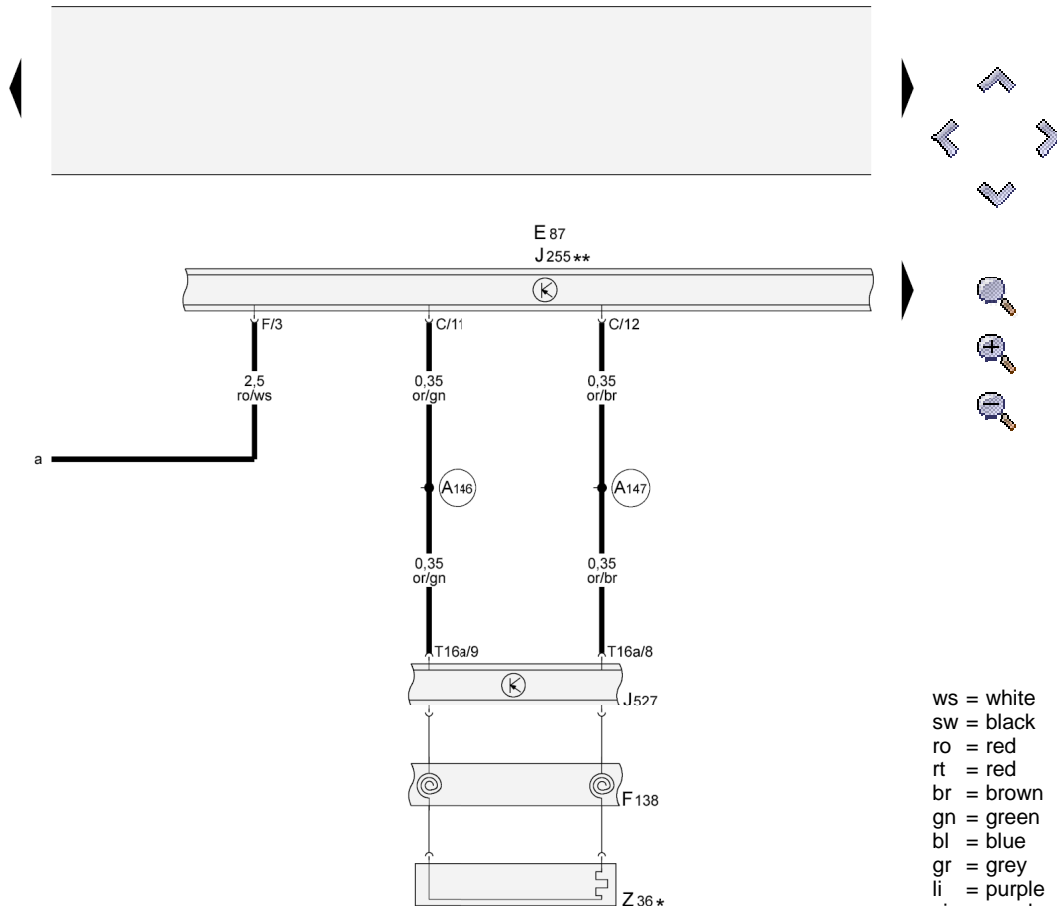

Heated steering wheel


- E87 - Operating and display unit for air conditioning system/Climatronic
- F138 - Airbag coil connector and return spring with slip ring
- J255 - Climatronic control unit
- J527 - Steering column electronics control unit 
- T16a - 16-pin connector, black, on steering column electronics control unit
- Z36 - Heated steering wheel
- A146 - Connection (convenience CAN bus, high), in dash panel wiring harness
- A147 - Connection (convenience CAN bus, low), in dash panel wiring harness
- * - for models with heated steering wheel only
- ** - applicable from August 2004

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Audi A4

Current Flow Diagram

No. 40 / 4

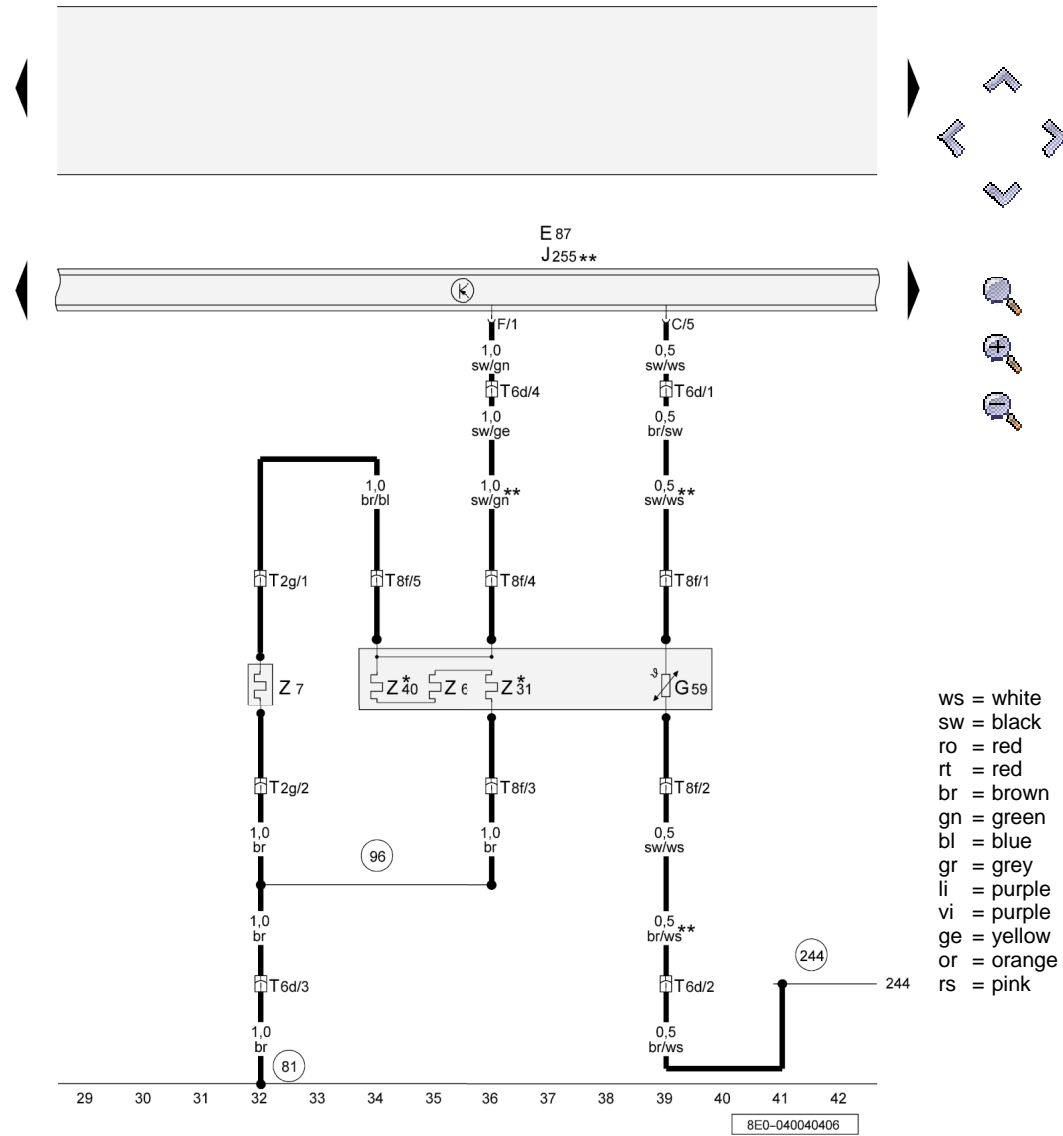

Heated driver seat cushion



- E87 - Operating and display unit for air conditioning system/Climatronic
 - G59 - Driver seat temperature sensor
 - J255 - Climatronic control unit
 - T2g - 2-pin connector, on driver seat for heated driver seat backrest
 - T6d - 6-pin connector, green, coupling station seat wiring, driver seat
 - T8f - 8-pin connector, on driver seat for heated driver seat
 - Z6 - Heated driver seat cushion
 - Z7 - Heated driver seat backrest
 - Z31 - Driver seat cushion lateral support heater
 - Z40 - Driver seat lateral support heater 2
 - 81 - Earth connection 1, in dash panel wiring harness
 - 96 - Earth connection 1, in seat heating wiring harness
 - 244 - Earth connection (sender earth), in Climatronic wiring harness
- * - only for models with seat lateral support heater
 ** - applicable from August 2004

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A4

Current Flow Diagram

No. 40 / 5

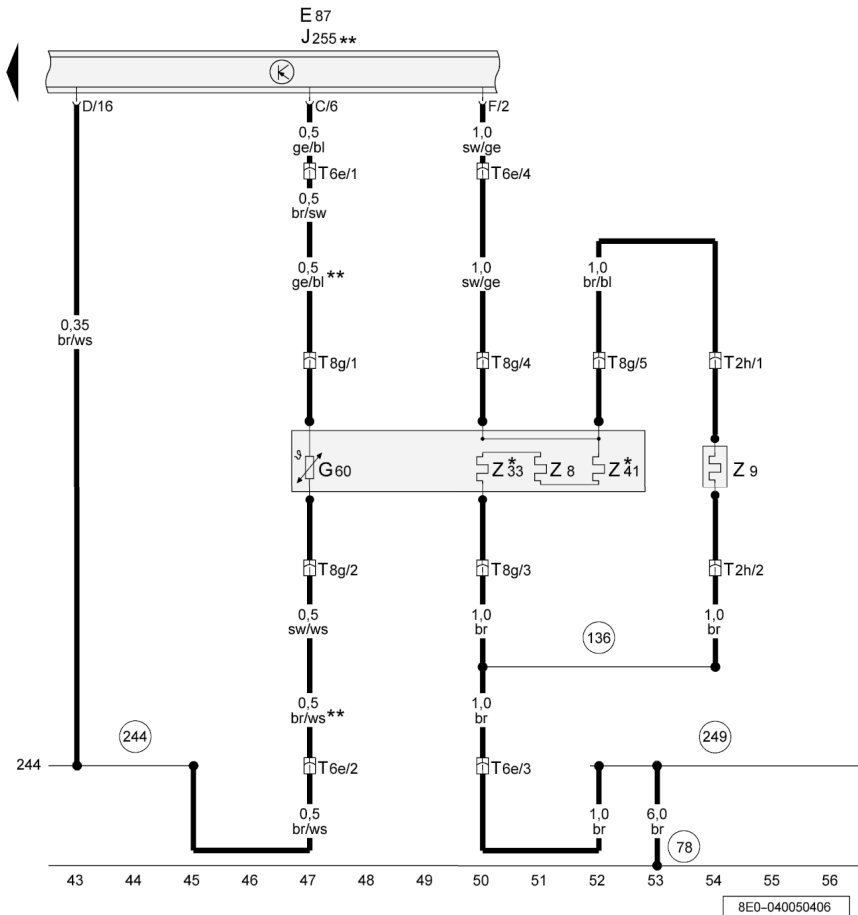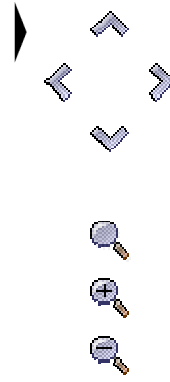

Heated front passenger seat cushion


- E87 - Operating and display unit for air conditioning system/Climatronic
- G60 - Front passenger seat temperature sensor
- J255 - Climatronic control unit
- T2h - 2-pin connector, on front passenger seat for heated front passenger seat backrest
- T6e - 6-pin connector, green, coupling station seat wiring, front passenger seat
- T8g - 8-pin connector, on front passenger seat for heated front passenger seat
- Z8 - Heated front passenger seat cushion
- Z9 - Heated front passenger seat backrest
- Z33 - Front passenger seat lateral support heater
- Z41 - Front passenger seat lateral support heater 2
- 78 - Earth point, lower part of right B-pillar
- 136 - Earth connection 2, in seat heating wiring harness
- 244 - Earth connection (sender earth), in Climatronic wiring harness
- 249 - Earth connection 2, in interior wiring harness
- * - only for models with seat lateral support heater
- ** - applicable from August 2004

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Audi A4

Current Flow Diagram

No. 40 / 6

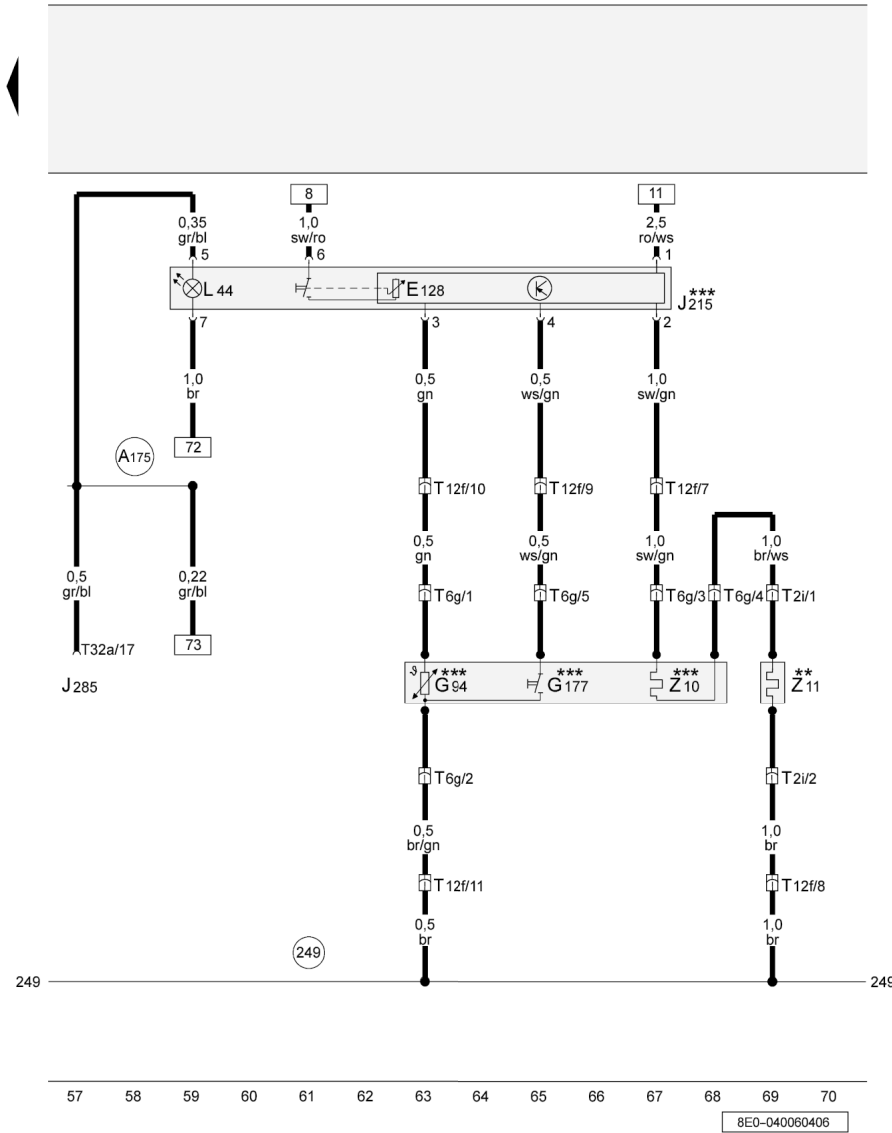

Heated rear left seat


- E128 - Heated rear left seat switch with regulator
- G94 - Rear left seat temperature sensor
- G177 - Rear seat occupied sensor on driver side
- J215 - Heated rear left seat control unit
- J285 - Control unit in dash panel insert 
- L44 - Seat heating switch illumination bulb
- T2i - 2-pin connector, heated rear left seat backrest
- T6g - 6-pin connector, on rear left seat
- T12f - 12-pin connector, black, under rear seat bench
- T32a - 32-pin connector, green, on dash panel insert
- Z10 - Heated rear left seat
- Z11 - Heated rear left seat backrest
- 249 - Earth connection 2, in interior wiring harness
- A175 - Connection (58s), in dash panel wiring harness
- *** - for models with heated rear seats only

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A4

Current Flow Diagram

No. 40 / 7

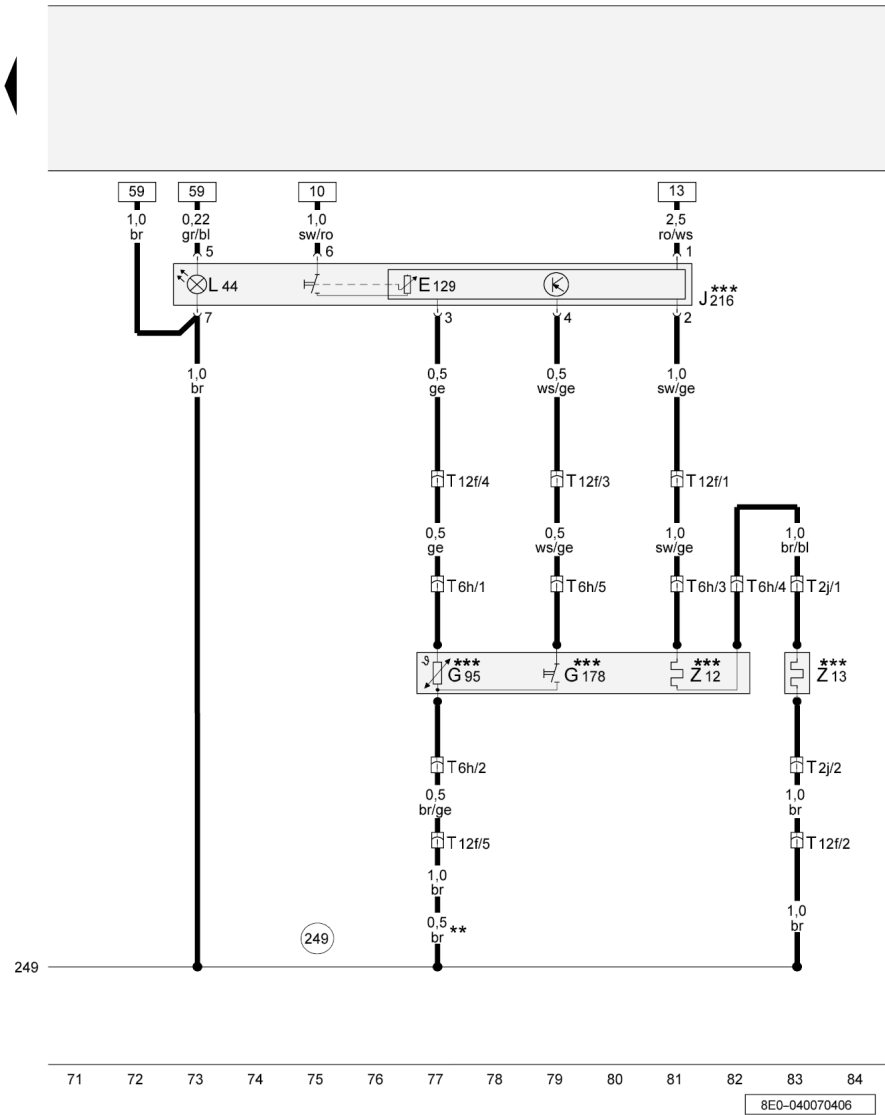

Heated rear right seat

- E129 - Heated rear right seat switch with regulator
- G95 - Rear right seat temperature sensor
- G178 - Rear seat occupied sensor on front passenger side
- J216 - Heated rear right seat control unit
- L44 - Seat heating switch illumination bulb
- T2j - 2-pin connector, heated rear right seat backrest
- T6h - 6-pin connector, on rear right seat
- T12f - 12-pin connector, black, under rear seat bench
- Z12 - Heated rear right seat
- Z13 - Heated rear right seat backrest
- 249 - Earth connection 2, in interior wiring harness
- ** - applicable from August 2004
- *** - for models with heated rear seats only

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink