


Removing and installing socket for towing bracket

Removing

- Switch off ignition and take out ignition key.
- Unscrew bolts -arrows-.
- Detach connection socket from retaining plate.

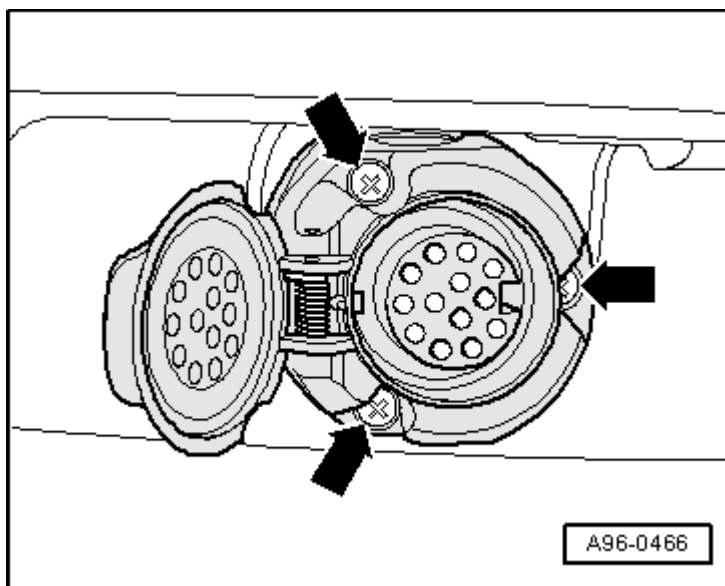

- Unplug connector -2- for contact switch for rear fog light cut-out and press connector -1- out of socket.

Installing

Install in reverse order.

