	8 - Vacant 9 - ABS control unit (terminal 30) on vehicles with ESP	4 - Oxygen sensor (downstream of catalytic converter)	<ul><li>2 - Vacant</li><li>3 - Air mass meter,</li><li>oxygen sensor upstream of catalytic converter</li></ul>	o.
<ul> <li>4 - Pump for central locking, sun blind for rear window, anti-dazzle interior and exterior mirrors, parking aid</li> <li>5 - Central locking, electric window control</li> <li>6 - Sun roof</li> <li>7 - Rear cigarette lighter, heated lock cylinder</li> </ul>	courtesy lights and lights for footwells, interior monitor, interior central locking switch, memory for mirror and seat positions	memory for seat position, toll pass, rear head restraints, potentiometer for seat heating 10  3 - Make-up mirror, lock release for boot lid,	anti-theft alarm diode, interior lights	Fuse carrier 5 (brown)  No. amps  1 - Pump for central locking
	(akeli as collect.	Please note that the fuse list which appears here, while correct at the time of printing, is subject to alterations. The information given on the sticker inside the fuse cover can be	9 - Steering wheel and seat belt height adjustment	No. amps


### Additional fuse

(above black fuse carrier)

					A
60		:	:	÷	left-hand drive vehicles
					Radiator fan for
sd	amp				

# Automatic circuit breakers

The electric windows and electric seat adjusters are protected by circuit breakers. These reset automatically after a few seconds when the overload (caused for example by frozen windows) has been corrected.

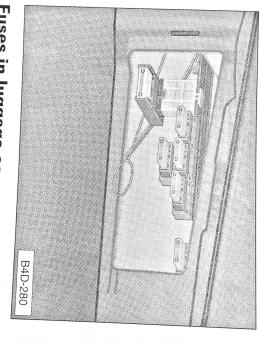

# Fuses in luggage compartment, right

(from front to back)

#### No.

rear seat adj	restraints (ve	<ul> <li>Retract func</li> </ul>	6A - Rear seat	4A - Telephone	(on vehicle	3B - Anti-lock k	telephone	3A - Radio / Ioudspeakers,	2B - Towing br	2A - Seat heat
rear seat adjustment)	restraints (vehicles without	Retract function for rear head	6A - Rear seat adjustment 30	4A - Telephone 5	(on vehicles with ESP) 25	3B - Anti-lock brake system	telephone 15/20	loudspeakers,	2B - Towing bracket 20	2A - Seat heating, rear

## Colour coding for fuses

Light brown 5 amp Red 10 amp Blue 15 amp Yellow 20 amps Cream (white) 25 amps Green 30 amps If the engine should ever fail to start because of a discharged battery, jump another vehicle to start the engine. Note the following points:	J . C 18003
10 amps 15 amps 20 amps 25 amps 30 amps to start y, jump pattery of Note the	