

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink


Central locking, fuses

- K133 - Central locking warning lamp -SAFE-
- M27 - Door warning lamp, left
- M28 - Door warning lamp, right
- S1 - Fuse in fuse carrier
- S3 - Fuse in fuse carrier
- S5 - Fuse in fuse carrier
- T10o - 10-pin connector, connector plug B at V94
- V94 - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system
- B115 - Positive (+) connection (30, central electrics), in interior wiring harness
- Q11 - Positive (+) connection (30 a), in electric window/central locking wiring harness
- S25 - Positive (+) connection (30a), in central locking wiring harness
- * - Does not apply to models for Japan
- ** - Only models for Japan

Audi A8

Current Flow Diagram

No. 38 / 3

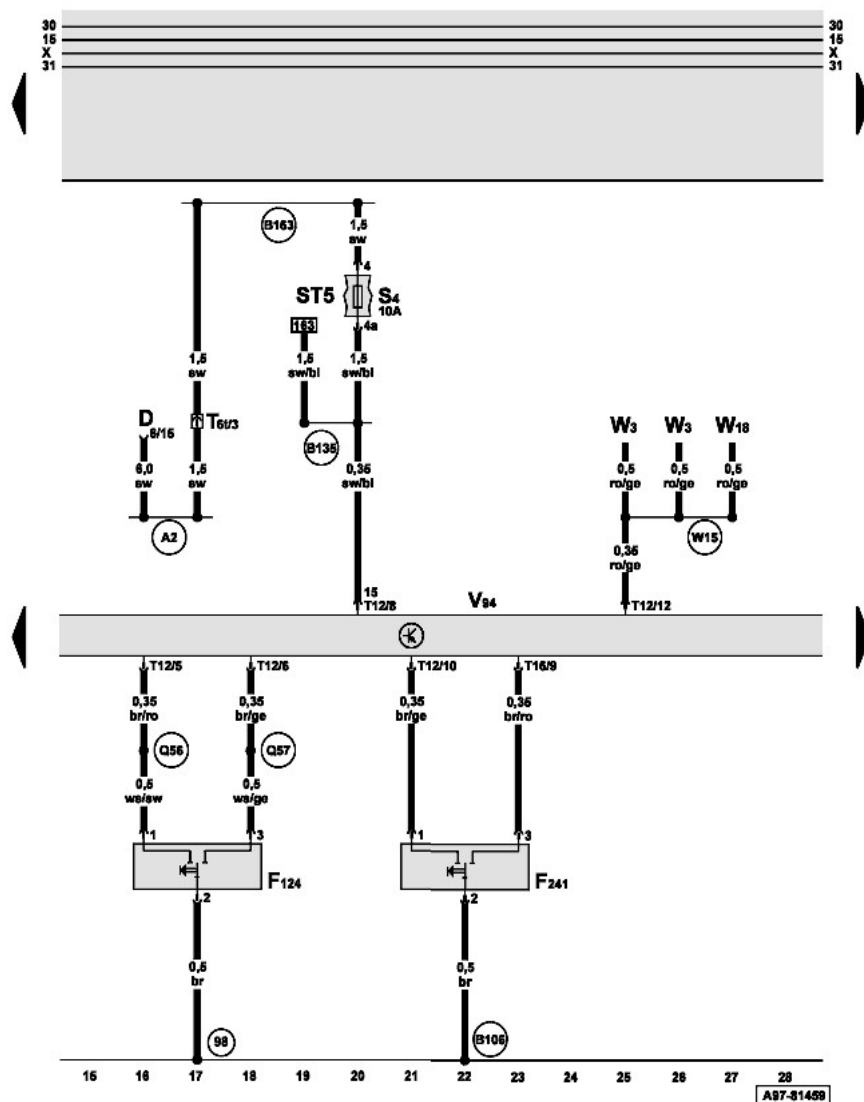

Switch in lock cylinder for tailgate/boot lid anti-theft alarm system/central locking system, contact switch in lock cylinder on driver's side, luggage compartment light




- | | |
|------|--|
| D | - Ignition/starter switch |
| F124 | - Switch in lock cylinder for tailgate/boot lid anti-theft alarm system/central locking system |
| F241 | - Contact switch in lock cylinder, driver's side |
| S4 | - Fuse in fuse carrier |
| T6t | - 6-pin connector, red, footwell, right, at wheelhouse, behind carpet |
| T12 | - 12-pin connector, connector plug A at V94 |
| T16 | - 16-pin connector, connector plug C at V94 |
| V94 | - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system |
| W3 | - Luggage compartment light |
| W18 | - Luggage compartment light, left |
| 98 | - Earth connection, in tailgate/boot lid wiring harness |
| A2 | - Positive (+) connection (15), in dash panel wiring harness |
| B106 | - Earth connection (driver's door/1), in interior wiring harness |
| B135 | - Connection -1- (15a), in interior wiring harness |
| B163 | - Positive (+) connection -1- (15), in interior wiring harness |
| Q56 | - Connection (open), in anti-theft alarm system wiring harness |
| Q57 | - Connection (closed), in anti-theft alarm system wiring harness |
| W15 | - Connection -1- (luggage compartment light), in rear wiring harness |

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Audi A8

Current Flow Diagram

No. 38 / 4

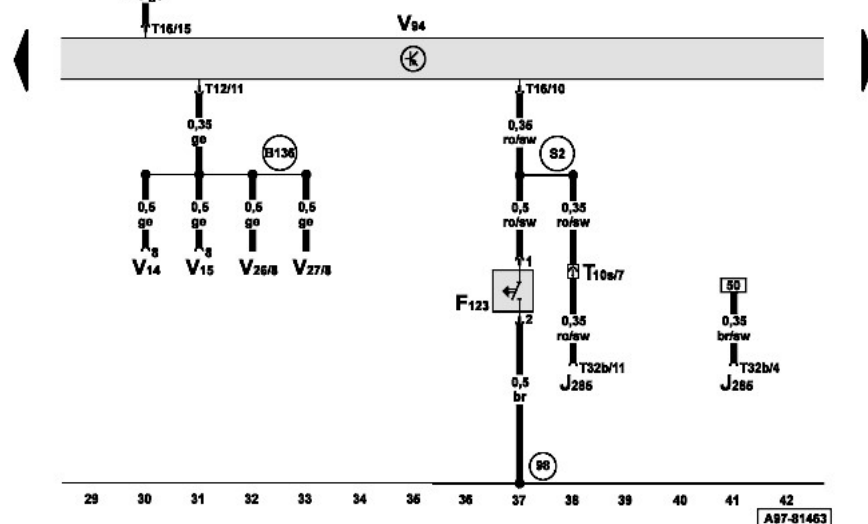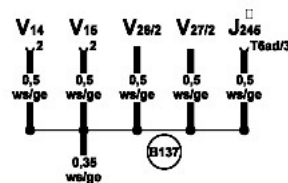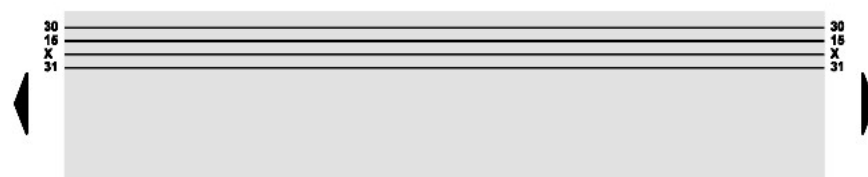

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink


Tailgate/boot lid contact switch for anti-theft alarm system, electric window motors

- F123 - Tailgate/boot lid contact switch for anti-theft alarm
- J245 - Sliding sunroof adjustment control unit
- J285 - Control unit with display in dash panel insert
- T6ad - 6-pin connector, black, on sliding sunroof adjustment control unit
- T10s - 10-pin connector, black, footwell, right, at wheelhouse, behind carpet
- T12 - 12-pin connector, connector plug A at V94
- T16 - 16-pin connector, connector plug C at V94
- T32b - 32-pin connector, grey, on dash panel insert
- V14 - Electric window motor, left
- V15 - Electric window motor, right
- V26 - Electric window motor, rear left
- V27 - Electric window motor, rear right
- V94 - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system
- 98 - Earth connection, in tailgate/boot lid wiring harness
- B136 - Connection (opening - convenient open/close function), in electric window wiring harness
- B137 - Connection (closing - convenient open/close function), in electric window wiring harness
- S2 - Connection, in central locking wiring harness
- * - Models with electric sliding sunroof

Audi A8

Current Flow Diagram

No. 38 / 5

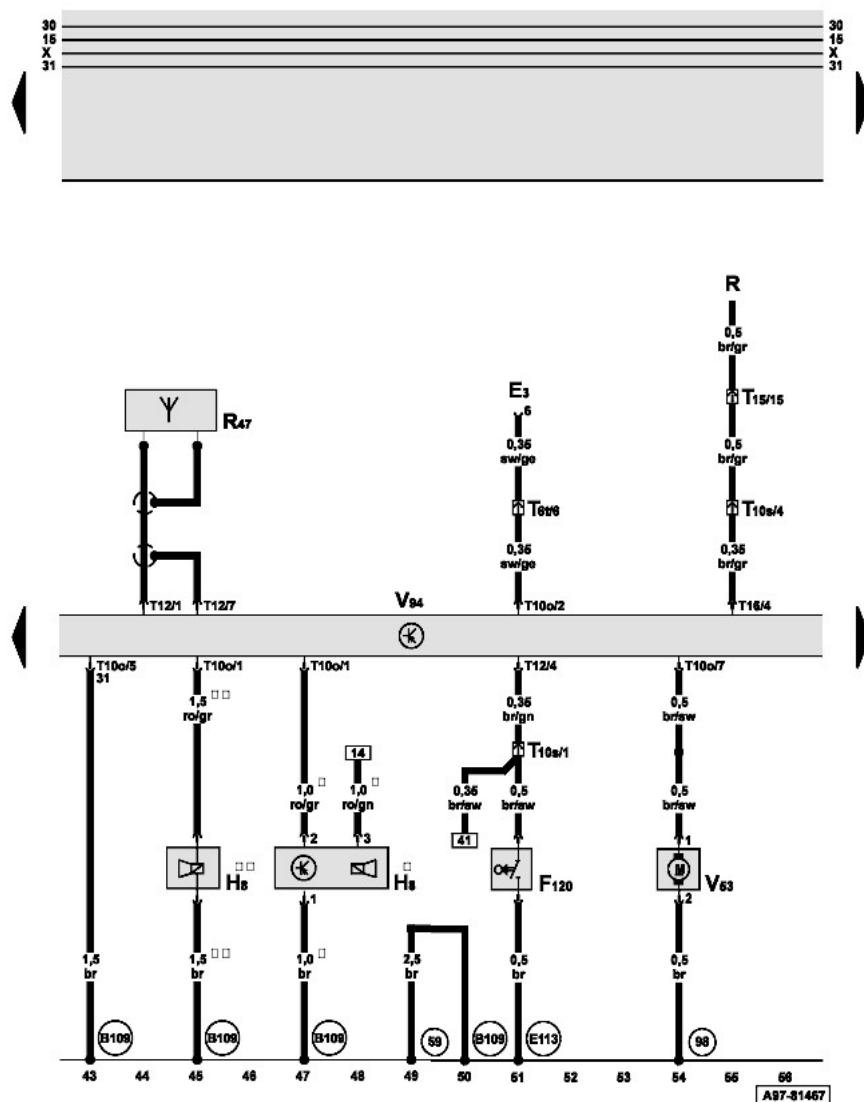

Anti-theft alarm system horn, anti-theft alarm system contact switch, central locking and anti-theft alarm system aerial, central locking motor



- E3 - Hazard warning light switch
- F120 - Anti-theft alarm system contact switch, bonnet
- H8 - Anti-theft alarm system horn
- R - Radio
- R47 - Central locking and anti-theft alarm system aerial
- T6t - 6-pin connector, red, footwell, right, at wheelhouse, behind carpet
- T10o - 10-pin connector, connector plug B at V94
- T10s - 10-pin connector, black, footwell, right, at wheelhouse, behind carpet
- T12 - 12-pin connector, connector plug A at V94
- T15 - 15-pin connector, black, in centre console
- T16 - 16-pin connector, connector plug C at V94
- V53 - Central locking motor, tailgate/boot lid
- V94 - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system
- 59 - Earth point, near left tail light
- 98 - Earth connection, in tailgate/boot lid wiring harness
- B109 - Earth connection, in interior wiring harness, rear left
- E113 - Earth connection, in dash panel wiring harness, right
- * - Does not apply to models for Japan
- ** - Only models for Japan

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Audi A8

Current Flow Diagram

No. 38 / 6

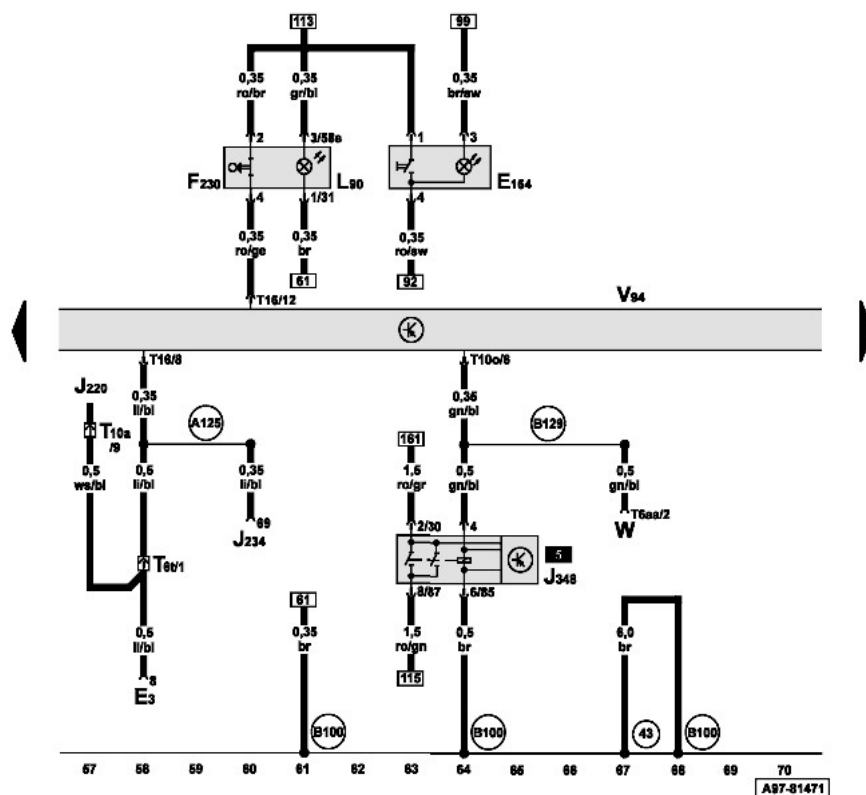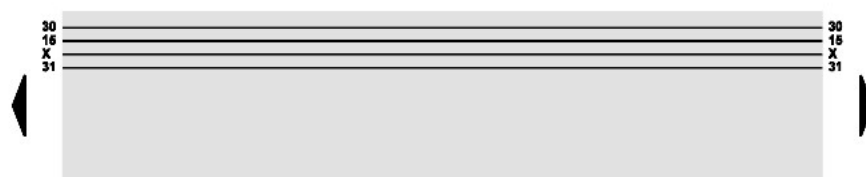

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink


Glove box lock contact switch, luggage compartment release switch, entry and footwell lighting relay

- E3 - Hazard warning light switch
- E164 - Luggage compartment release switch
- F230 - Glove box lock contact switch
- J220 - Motronic control unit
- J234 - Airbag control unit
- J348 - Entry and footwell lighting relay
- L90 - Glove box lock illumination
- T6t - 6-pin connector, red, footwell, right, at wheelhouse, behind carpet
- T6aa - 6-pin connector, connector 1, on interior light, front
- T10a - 10-pin connector, black, connector point, electronics box, plenum chamber
- T10o - 10-pin connector, connector plug B at V94
- T16 - 16-pin connector, connector plug C at V94
- V94 - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system
- W - Interior light, front
- 43 - Earth point, lower part of right A pillar
- A125 - Connection (crash signal), in dash panel wiring harness
- B100 - Earth connection, in interior wiring harness, front right
- B129 - Connection (interior light, 31 L), in interior wiring harness

Audi A8

Current Flow Diagram

No. 38 / 7

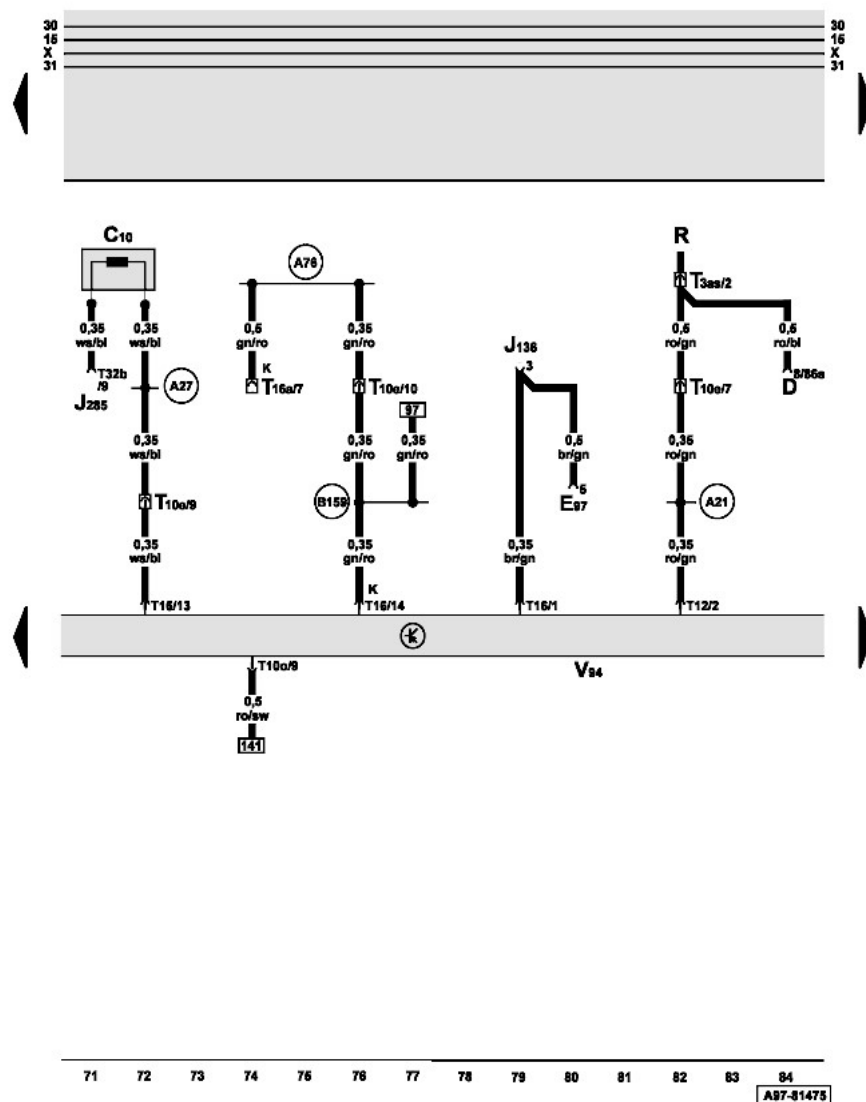


Diagnosis connection, control unit with display in dash panel insert

- C10 - Suppression filter
- D - Ignition/starter switch
- E97 - Memory operating unit
- J136 - Seat adjustment (with memory) control unit
- J285 - Control unit with display in dash panel insert
- R - Radio
- T3as - 3-pin connector, black, in centre console
- T10e - 10-pin connector, green, footwell, right, at wheelhouse, behind carpet
- T10o - 10-pin connector, connector plug B at V94
- T12 - 12-pin connector, connector plug A at V94
- T16 - 16-pin connector, connector plug C at V94
- T16a - 16-pin connector, diagnosis connection
- T32b - 32-pin connector, grey, on dash panel insert
- V94 - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system
- A21 - Connection (86s), in dash panel wiring harness
- A27 - Connection (speed signal), in dash panel wiring harness
- A76 - Connection (diagnosis wire K), in dash panel wiring harness
- B159 - Connection (diagnosis), in interior wiring harness

Audi A8

Current Flow Diagram

No. 38 / 8

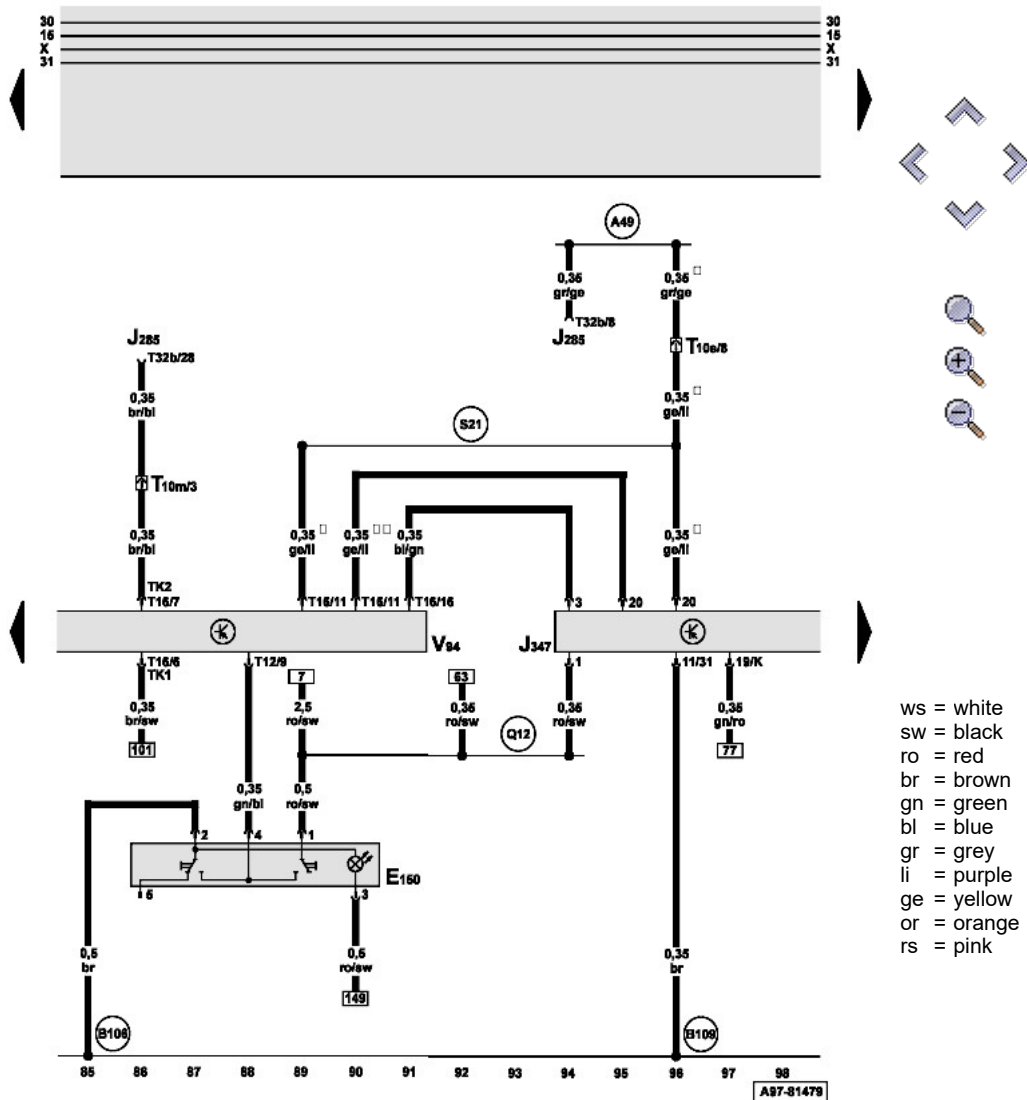

Interior locking switch on driver's side, ultra-sonic sensor control unit

- E150 - Interior locking switch, driver's side
- J285 - Control unit with display in dash panel insert
- J347 - Ultra-sonic sensor control unit
- T10m - 10-pin connector, grey, footwell, right, at wheelhouse, behind carpet
- T10s - 10-pin connector, black, footwell, right, at wheelhouse, behind carpet
- T12 - 12-pin connector, connector plug A at V94
- T16 - 16-pin connector, connector plug C at V94
- T32b - 32-pin connector, grey, on dash panel insert
- V94 - Central locking motor with control unit for interior lights switch-off delay and anti-theft alarm system
- A49 - Connection -1-, in dash panel wiring harness
- B106 - Earth connection (driver's door/1), in interior wiring harness
- B109 - Earth connection, in interior wiring harness, rear left
- Q12 - Positive (+) connection (30 a), in electric window/central locking wiring harness
- S21 - Connection -5-, in central locking wiring harness
- * - Does not apply to models for Japan
- ** - Only models for Japan


- * - Does not apply to models for Japan

** - Only models for Japan

Audi A8

Current Flow Diagram

No. 38 / 9

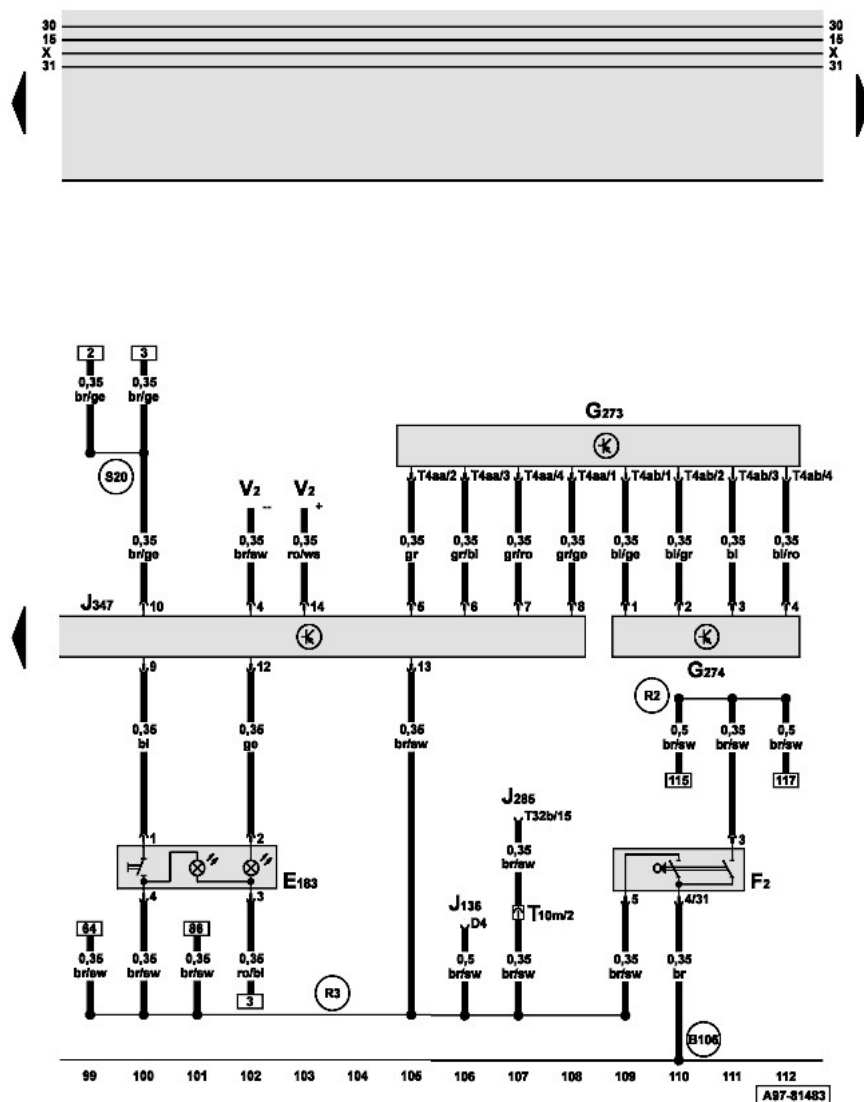

Ultra-sonic sensor control unit, interior monitor switch, door contact switch on driver's side


- E183 - Interior monitor switch
- F2 - Door contact switch, driver's side
- G273 - Interior monitoring sensor
- G274 - Interior monitoring sender
- J136 - Seat adjustment (with memory) control unit
- J285 - Control unit with display in dash panel insert
- J347 - Ultra-sonic sensor control unit
- T4aa - 4-pin connector, at interior monitoring sensor
- T4ab - 4-pin connector, at interior monitoring sensor
- T10m - 10-pin connector, grey, footwell, right, at wheelhouse, behind carpet
- T32b - 32-pin connector, grey, on dash panel insert
- V2 - Fresh air blower
- B106 - Earth connection (driver's door/1), in interior wiring harness
- R2 - Connection (door contact switch, left), in electric window/central locking and door contact switch wiring harness
- R3 - Connection (door contact switch, right and left), in electric window/central locking system and door contact switch wiring harness
- S20 - Connection -4-, in central locking wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Audi A8

Current Flow Diagram

No. 38 / 10

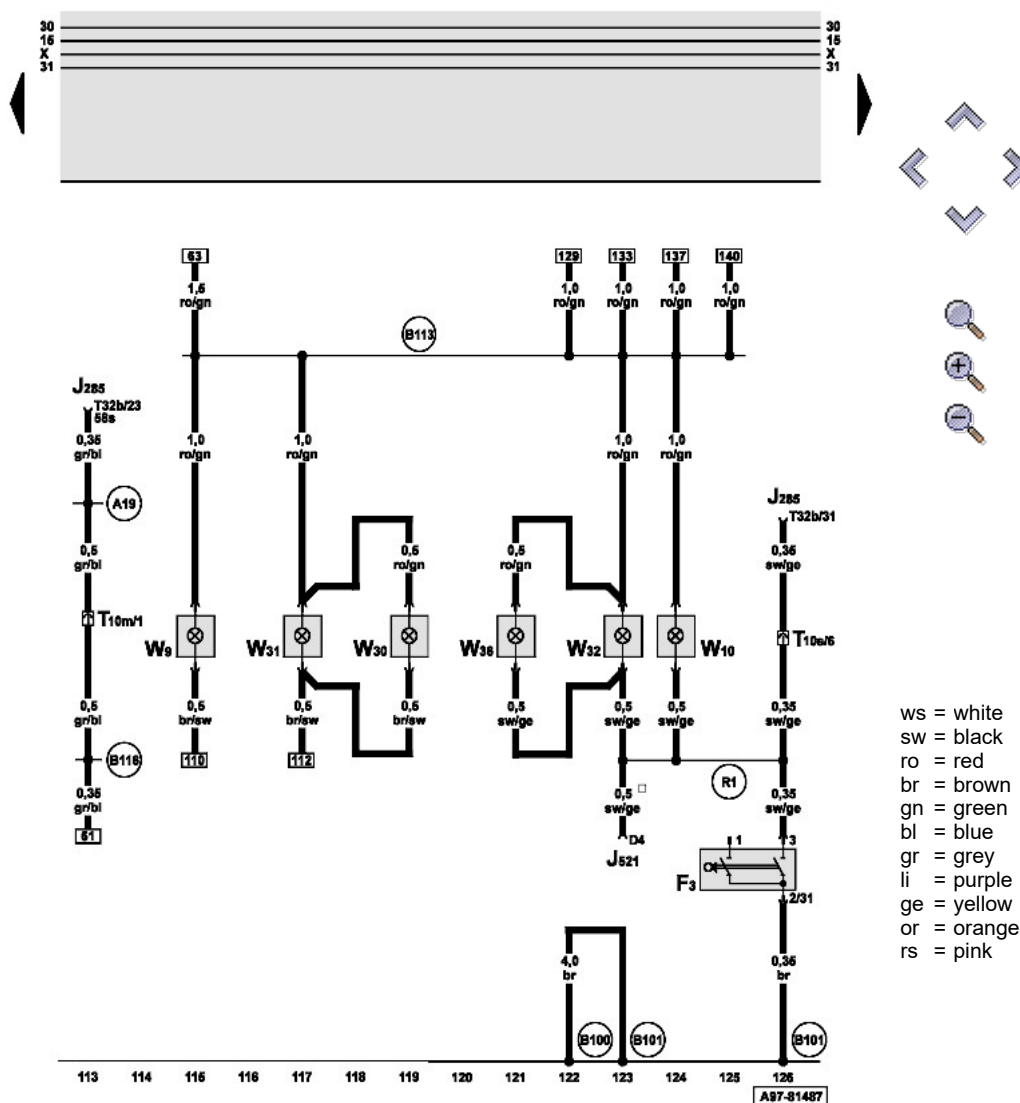


Door contact switch on front passenger's side, right footwell light, front right entry light

- F3 - Door contact switch, front passenger's side
- J285 - Control unit with display in dash panel insert
- J521 - Seat adjustment with memory control unit, front passenger's side
- T10m - 10-pin connector, grey, footwell, right, at wheelhouse, behind carpet
- T10s - 10-pin connector, black, footwell, right, at wheelhouse, behind carpet
- T32b - 32-pin connector, grey, on dash panel insert
- W9 - Left footwell light
- W10 - Right footwell light
- W30 - Door warning lamp, driver's side
- W31 - Front left entry light
- W32 - Front right entry light
- W36 - Door warning lamp, front passenger's side
- A19 - Connection (58s), in dash panel wiring harness (switch illumination)
- B100 - Earth connection, in interior wiring harness, front right
- B101 - Earth connection (front passenger's door), in interior wiring harness
- B113 - Connection (30a), in interior wiring harness, left
- B116 - Connection (58s), in interior wiring harness
- R1 - Connection (door contact switch, right), in electric window/central locking and door contact switch wiring harness
- * - Seat adjustment on front passenger's side with memory function

Audi A8

Current Flow Diagram

No. 38 / 11

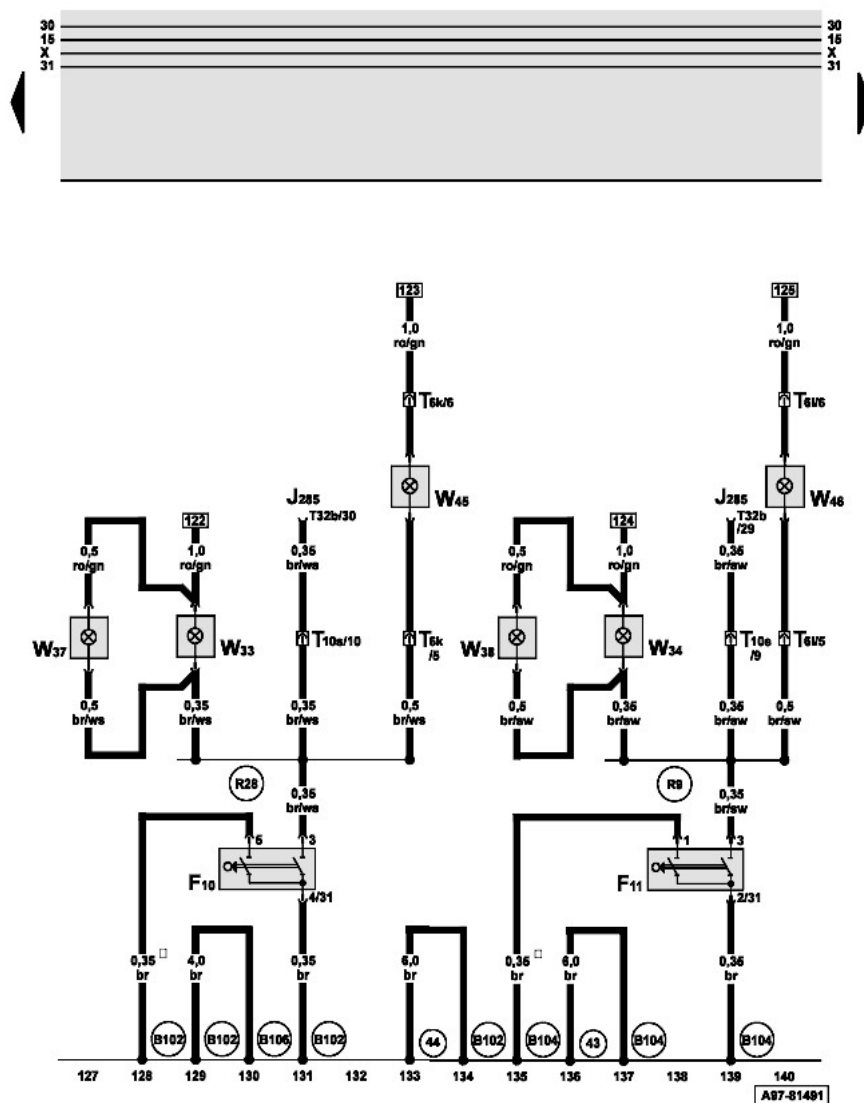



Door contact switch - rear left and rear right, entry light - rear left and rear right

- F10 - Rear left door contact switch
- F11 - Rear right door contact switch
- J285 - Control unit with display in dash panel insert
- T6k - 6-pin connector, green, under driver's seat
- T6l - 6-pin connector, green, under front passenger's seat
- T10s - 10-pin connector, black, footwell, right, at wheelhouse, behind carpet
- T32b - 32-pin connector, grey, on dash panel insert
- W33 - Rear left entry light
- W34 - Rear right entry light
- W37 - Door warning lamp, rear left
- W38 - Door warning lamp, rear right
- W45 - Rear left footwell light
- W46 - Rear right footwell light
- 43 - Earth point, lower part of right A pillar
- 44 - Earth point, lower part of left A pillar
- B102 - Earth connection, in interior wiring harness, front left
- B104 - Earth connection (rear right), in interior wiring harness
- B106 - Earth connection (driver's door/1), in interior wiring harness
- R9 - Connection (door contact switch), in rear wiring harness
- R28 - Connection -2- (door contact switch), in rear wiring harness
- * - Only applies to long wheelbase versions

Audi A8

Current Flow Diagram

No. 38 / 12

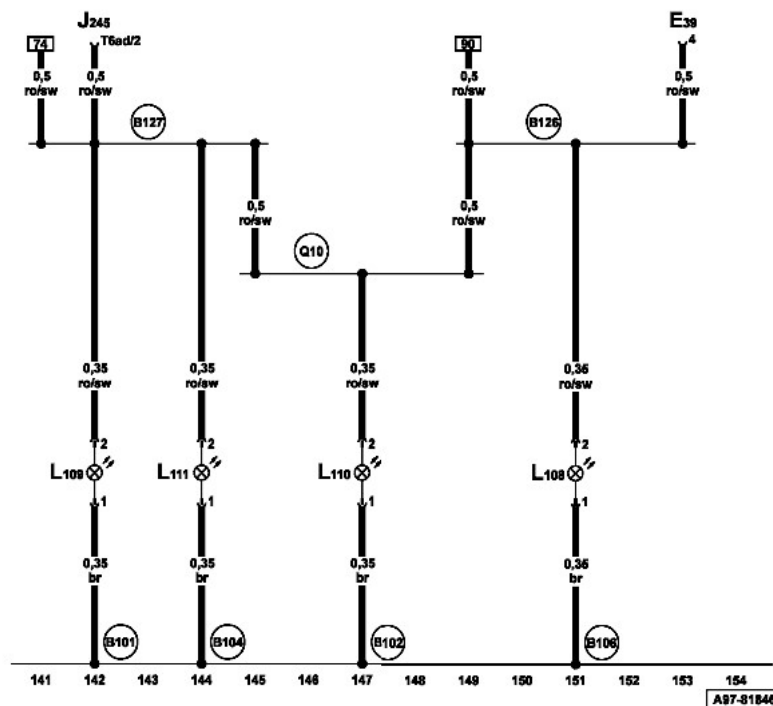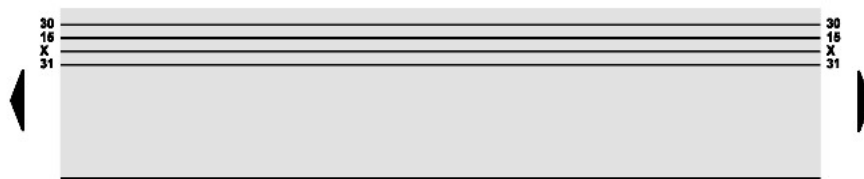

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink


Interior door handle lighting

- E39 - Rear electric window isolation switch
- J245 - Sliding sunroof adjustment control unit
- L108 - Door opening illumination, driver's side
- L109 - Door opening illumination, front passenger's side
- L110 - Door opening illumination, rear left
- L111 - Door opening illumination, rear right
- T6ad - 6-pin connector, black, on sliding sunroof adjustment control unit
- B101 - Earth connection (front passenger's door), in interior wiring harness
- B102 - Earth connection, in interior wiring harness, front left
- B104 - Earth connection (rear right), in interior wiring harness
- B106 - Earth connection (driver's door/1), in interior wiring harness
- B126 - Connection (87, driver's door), in interior wiring harness
- B127 - Connection (87, front passenger's door), in interior wiring harness
- Q10 - Positive (+) connection (87), in electric window/central locking and door contact switch wiring harness

Audi A8

Current Flow Diagram

No. 38 / 13

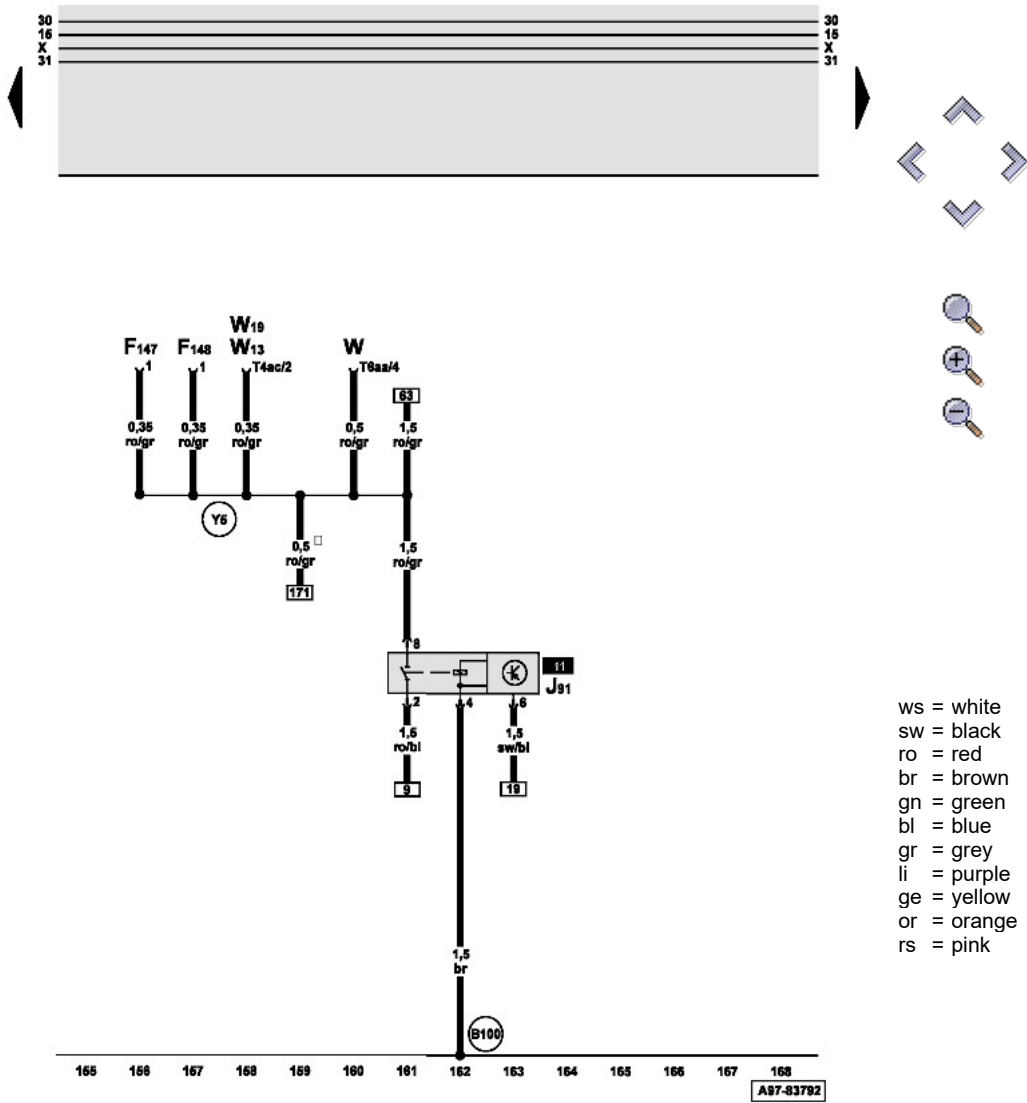

Reading lamp relay


- F147 - Vanity mirror contact switch, driver's side
- F148 - Vanity mirror contact switch, front passenger's side
- J91 - Reading lamp relay
- T4ac - 4-pin connector, on reading lights switch
- T6aa - 6-pin connector, connector 1, on interior light, front
- W - Interior light, front
- W13 - Front passenger reading lamp
- W19 - Reading lamp, driver's side
- B100 - Earth connection, in interior wiring harness, front right
- Y5 - Connection (87), in interior light wiring harness
- * - Only applies to long wheelbase versions with sunroof

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Audi A8

Current Flow Diagram


No. 38 / 14

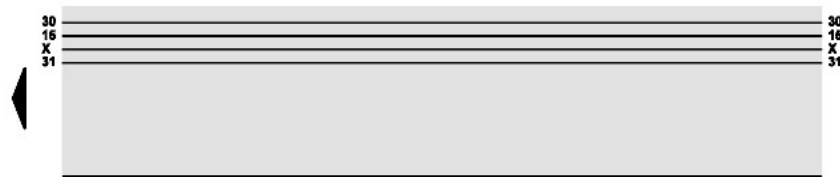

Rear vanity mirrors

- F298 - Rear left vanity mirror contact switch
- F299 - Rear right vanity mirror contact switch
- T2cr - 2-pin connector, black, near interior light, front
- W49 - Rear left illuminated vanity mirror
- W50 - Rear right illuminated vanity mirror
- B109 - Earth connection, in interior wiring harness, rear left

* - Only applies to long wheelbase versions with sunroof

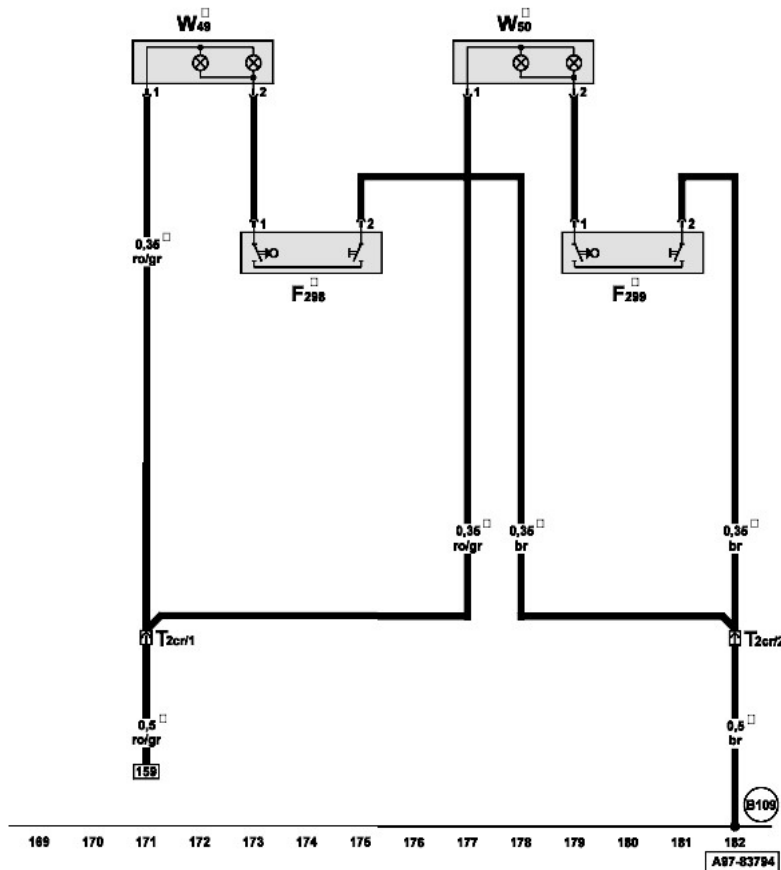

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink