


- Wiring Color Code**
- ws=white
 - sw=black
 - ro=red
 - gn=green
 - br=brown
 - bl=blue
 - gr=gray
 - li=violet
 - ge=yellow
 - or=orange

97-17455

- D - Ignition/Starter Switch
- G 44 - Right Rear ABS Wheel Speed Sensor
- G 45 - Right Front ABS Wheel Speed Sensor
- G 46 - Left Rear ABS Wheel Speed Sensor
- G 47 - Left Front ABS Wheel Speed Sensor
- J 104 - ABS Control Module (w/EDL)
- S 9 - Fuse
- S 14 - Fuse
- S 15 - Fuse
- S 21 - Fuse
- T 2 l - Double Connector, in engine compartment, front left
- T 2 m - Double Connector, in engine compartment, front right
- T 2 n - Double Connector, wheel well, left rear
- T 2 o - Double Connector, wheel well, right rear
- T 6 ac - 6-Pin Connector, blue, connector station 1
- (44) - Ground connection, on left A-pillar, lower part
- (A2) - Plus connection (15), in instrument panel wiring harness
- (A32) - Plus connection (30), in instrument panel wiring harness

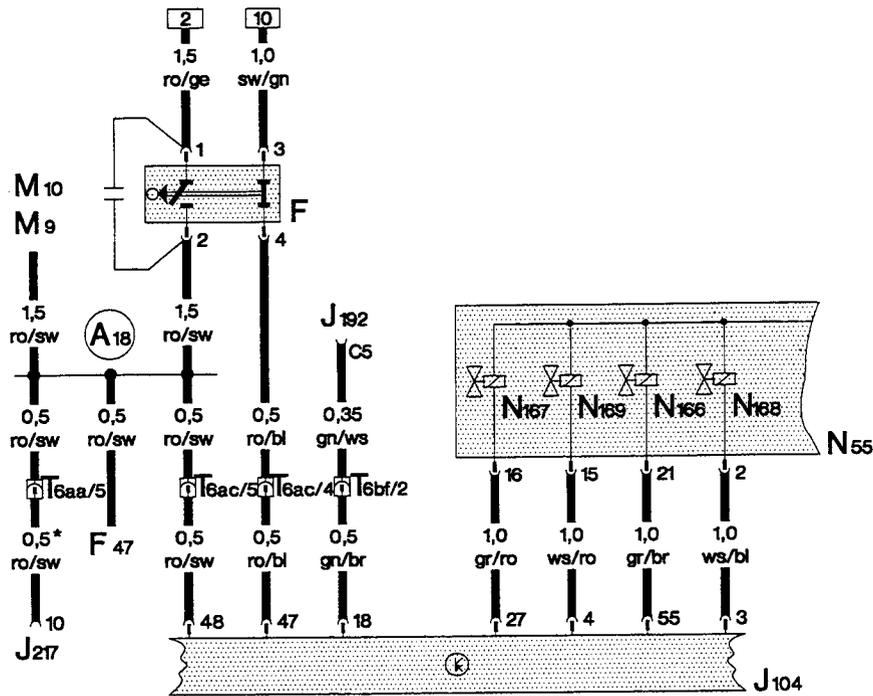

Wiring Color Code
 ws=white
 sw=black
 ro=red
 gn=green
 br=brown
 bl=blue
 gr=gray
 li=violet
 ge=yellow
 or=orange

11 12 13 14 15 16 17 18 19 20

97-17456


- F - Brake Light Switch
- F 47 - Vacuum Vent Valve, Breake
- J 104 - ABS Control Module (w/EDL)
- J 192 - MFI Engine Control Module (ECM)
- J 217 - Transmission Control Module (TCM)
- M 9 - Left Brake Light
- M 10 - Right Brake Light
- N 55 - ABS Hydraulic Unit
- N 166 - Right Front Traction Control Switch-Over Valve
- N 167 - Right Front Traction Control Outlet Valve
- N 168 - Left Front Traction Control Switch-Over Valve
- N 169 - Left Front Traction Control Outlet Valve
- T 6 aa - 6-Pin Connector, red, connector station 1
- T 6 ac - 6-Pin Connector, blue, connector station 1
- T 6 bf - 6-Pin Connector, brown, connector station 2

(A18) - Wire connection (54), in instrument panel wiring harness

* - Vehicles with automatic Transmission

30
15
X
31

30
15
X
31

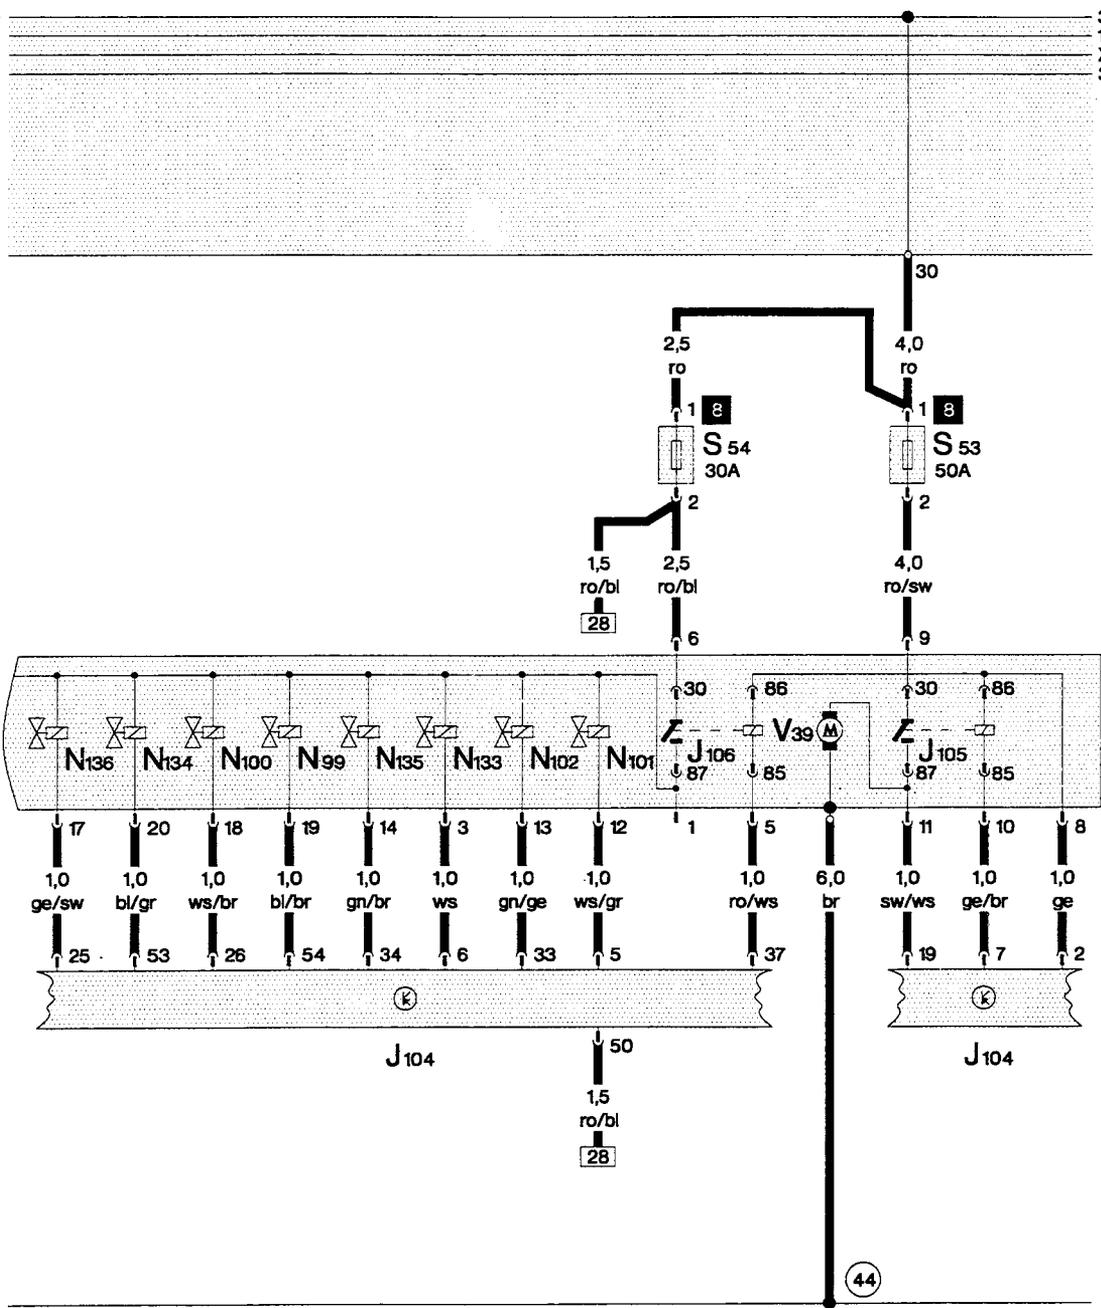


Wiring Color Code
 ws=white
 sw=black
 ro=red
 gn=green
 br=brown
 bl=blue
 gr=gray
 li=violet
 ge=yellow
 or=orange

21 22 23 24 25 26 27 28 29 30 31 32 33 34
 97-17457

- J 104 -ABS Control Module (w/EDL)
- J 105 -ABS Return Flow Pump Relay
- J 106 -ABS Solenoid Valve Relay
- N 55 -ABS Hydraulic Unit
- N 99 -Right Front ABS Inlet Valve
- N 100 -Right Front ABS Outlet Valve
- N 101 -Left Front ABS Inlet Valve
- N 102 -Left Front ABS Outlet Valve
- N 133 -Right Rear ABS Inlet Valve
- N 134 -Left Rear ABS Inlet Valve
- N 135 -Right Rear ABS Outlet Valve
- N 136 -Left Rear ABS Outlet Valve
- S 53 -ABS Hydraulic Pump Fuse
- S 54 -ABS Valves Fuse
- V 39 -ABS Return Flow Pump

(44) -Ground connection, on left A-pillar, lower part

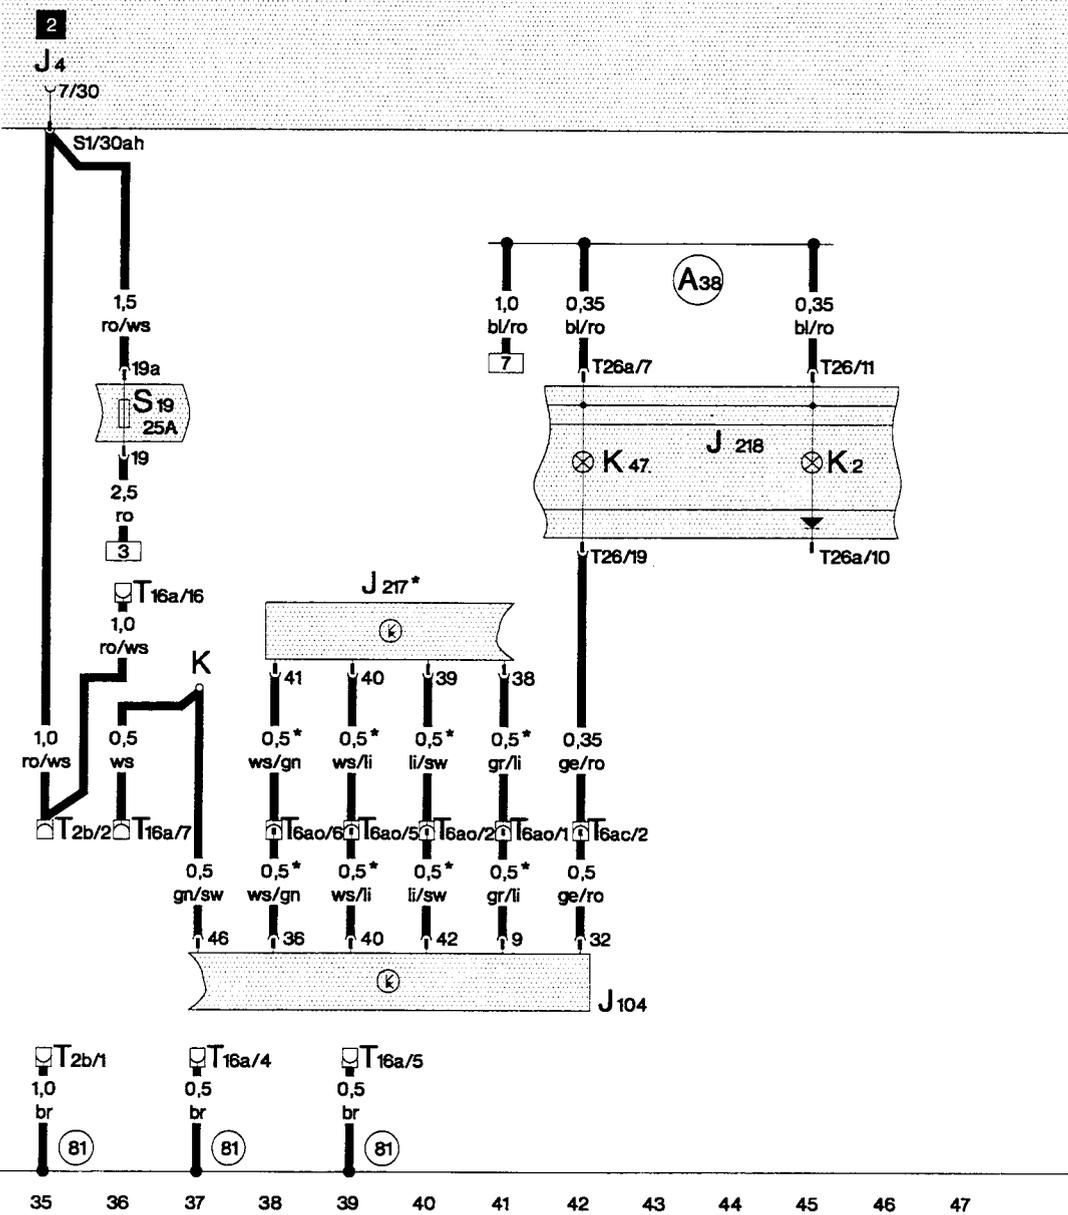

Wiring Color Code
 ws = white
 sw = black
 ro = red
 gn = green
 br = brown
 bl = blue
 gr = gray
 li = violet
 ge = yellow
 or = orange

97-17458

- J 4 - Dual Horn Relay
- J 104 - ABS Control Module (w/EDL)
- J 217 - Transmission Control Module (TCM)
- J 218 - Instrument Cluster Combination Processor
- K - DLC (Data Link Connector) Rapid Data Transfer
- K 2 - Generator (GEN) Warning Light
- K 47 - ABS Warning Light
- S 19 - Fuse
- T 2 b - Double Connector, black, Data Link Connector, on auxiliary reay panel I
- T 6 ac - 6-Pin Connector, blue, connector station 1
- T 6 ao - 6-Pin Connector, orange, connector station 1
- T 16 a - 16-Pin Connector, Data Link Connector, behind console
- T 26 - 26-Pin Connector, red, on instrument cluster
- T 26 a - 26-Pin Connector, green, on instrument cluster

- (81) - Ground connection -1-, in instrument panel wiring harness
- (A38) - Plus connection (15a II), in instrument panel wiring harness

* - Vehicles with automatic Transmission