

Coolant pipes - exploded view of components

1 - Coolant pipe (left-side)

☐ Remove and install together with → Chapter

2 - 9 Nm

3 - O-ring

☐ Renew

4 - Connecting hose

5 - 9 Nm

6 - Coolant pipe (front)

☐ Removing and installing → Chapter

7 - 9 Nm

8 - O-ring

☐ Renew

9 - Coolant temperature sender -G62-

☐ Removing and installing → Chapter

10 - Retaining clip

11 - Seal

☐ Renew

12 - O-ring

☐ Renew

13 - Coolant pipe (top)

☐ Removing and installing → Chapter

14 - 9 Nm

15 - Seal

☐ Renew

16 - Coolant pipe (left-side)

☐ Remove and install together with → Chapter

17 - 9 Nm

