


Audi > B5 Platform > 1996 - 2002**Body Exterior****60 - Sunroof****"Zero" position of sunroof motor (link guide), checking and adjusting****Note:**

"Zero" position can only be checked once sunroof motor has been removed.

- Remove sunroof motor
- Remove trim.
- Push front guide, rear guide and guide hook toward front until catch snaps into sunroof frame.

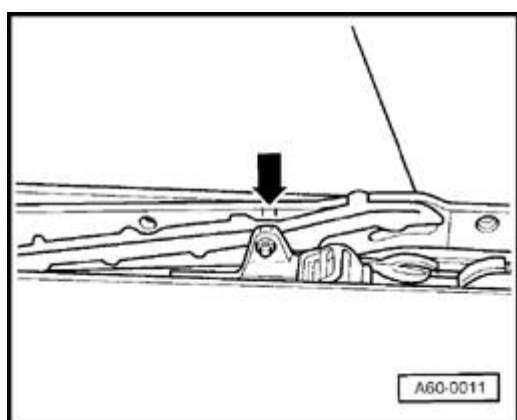

- Slide rear guide from front to rear.
- Guide pins on both sides must be located between the markings on the link guide (arrow); push guide back if necessary.

This is the "zero" position.